


User Manual

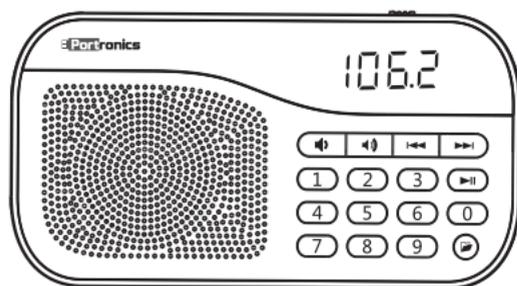

plugs
Portable sound system

Important Safety Instructions

- ◆ Keep speaker away from water and other liquids.
- ◆ Keep speaker away from any source of heat.
- ◆ Adjust the volume to a suitable level so as to avoid damaging your hearing, or the unit itself.

Features

1. LED Digital Display

Display the music playing time, radio channel, working status etc

2. To Choose a Song/FM Channel by Digital Keypad

By pressing the digital buttons to choose the song/ radio channel

3. Micro SD Card Music Playing

Supports MP3 format coding rate & has power off memory function

4. FM Radio

Support to scan and save radio channels

5. Radio Channel Saving Function

By pressing the Folder button to save the current FM Channel.

6. Folder Switching

The folder of the Micro SD Card can be switched, and can enter the numbered folder directly.

7. Card Reader and Charging Function

The card reader and the charging functions can be achieved via the same USB cable.

Technical Data

Output	:	2.5W
Speaker	:	40mm
Impedance	:	4 OHM
Voltage	:	DC 5V
Li-Battery	:	800 mAh (BL-5C)
Net Weight	:	116 g
Size	:	120*64*30.5mm
Playing time	:	around 3 hours at the highest volume

Package Contents

Speaker, Micro USB Cable, BL-5C Lithium-Ion battery (800 mAh), User Manual, Strap, Warranty Card

Quick Start

1 Power On/Off



MUSIC FM OFF

OFF : Power off the speaker

FM : FM mode

MUSIC : Music mode

2 Micro SD card Music playing

- (1) Place a Micro SD Card into the speaker, pull the **MUSIC/FM/OFF** button to **MUSIC** position & the speaker will play the Micro SD card music.
- (2) Short press the **◀▶** button for previous/next song. And press the **◀/▶** button to adjust the volume. Long press the **▶▶** button and it will show the total songs' number of the current folder
- (3) Choosing a song by the digital keypad: When playing the music from Micro SD Card, please press the digital button to choose a song. For example, if you want to play the 58th song, press the button "5" and "8", it will play after 2 second.

Please note: After pressing the number keypad, speaker will play the selected music. Under this operation, pressing other buttons is invalid.

(4) Power off memory function: The speaker will remember the song's playing position and volume before last time power off.

(5) Folder switching function:

Short press the **▶** button to switch to the next folder quickly;

Long press keypad number 1-9, it can enter the numbered folder quickly. (Please number the folder list of the Micro SD on the computer first). Under this operation, pressing other buttons is invalid.

3 FM Radio

- (1) FM: Pull the **OFF/FM/MUSIC** button to **FM** position, the speaker will turn to the FM mode.
- (2) Semi-Auto scan the FM channels: Press the **◀▶** button to scan the previous/next radio channel. And use the **◀/▶** button to adjust the volume.
- (3) Choosing the radio channel by the digital keypad: Please press the digital button to choose the FM radio channel. For example, if you want to play the 97.1MHZ channel, press the button "9" "7" and "1", it will play after 2 second.

Please note: After press the number, it will play the selected channel.

(4) The FM has the memory function. The speaker will remember the channel before the last time power off.

(5) Save FM Radio Channel function: Short press the **▶** button, speaker can save this played channel and make it under the channel saving list. The maximum saving list is 9 channels. Long press the digital number 1-9 under FM mode, the speaker can play saved channels. Long press the

▶ button can delete the saving list.

Please note: If speaker has already saved 9 channels, but need to save the 10th channel. Then the channel 1 will be replaced accordingly.

4 Card Reader Function

Place a Micro SD card into the speaker and use the included USB cable to connect it to the computer. Pull the **MUSIC/FM/OFF** button to **MUSIC** position, long press the **▶▶** button to enter the card reader mode. The computer will automatically recognize the device and the Micro SD card will be able to be read /write on the computer directly. Long press the **▶▶** button again can exit this mode.

Please Note: Under Music playing mode, if the speaker is not connected to the computer, long press the **▶▶** button, the speaker will show the total number of the songs in the current folder.

5 Charging Function

The removable BL-5C battery can be charged repeatedly.

Use the USB cable included to connect the speaker to the computer or the branded good quality 5v/1000mA adaptor to charge the battery.

The speaker should not be charged for more than 4 hours.

Please note:

- (1) When low battery, the display will flash and power will off, please charge the battery immediately.
- (2) Under charging, the low and full battery icon on the display will flash alternately. When finished charging, the display will stop flashing. (If charging at power off status, there is no icon on the display).

Troubleshooting

1. What should I do if the Micro SD Card do not work?

- (1) Ensure that the Micro SD card is in good condition. Also check that the audio files are the correct format - MP3.
- (2) Beside the above case, the problem maybe the compatibility of the Micro SD card. We recommend you formatting the Micro SD Card to FAT32 file format.

2. I'm using FM mode but the speaker cannot receive any radio channels. How can I improve the speaker's FM signal strength?

Make sure the speaker is in an area capable of receiving an FM signal. Please try using a set of earphone with the speaker. They act as an external antenna to enhance the signal.