

## INSTRUCTIONS


- 1. **Read Instructions:** All the instruction should be read carefully before operation and follow the instruction.
- 2. **Environment:** The speaker should be situated away from heat sources such as radiators, with proper ventilation, and not expose to moistair or water.
- 3. **Positioning:** Place the speakers on a stable surface and out of reach of children.
- 4. **Power Sources:** The speaker should be connected to a power supply only of the type described in the operating instruction or as marked on the speaker, using the accessories enclosed
- 5. Electric Shock: To avoid shock hazard, do not remove the cover or dismantle the unit, do not insert anything into the unit.
- 6. Mending: The user should not attempt to repair the speaker. Servicing should be referred to qualified service personnel or returned to the dealer or contact nearest Portronics Service Centre For assistance.


- 7. Cleaning: Disconnect the main plugs from the outlet before cleaning the unit. Only use soft cloth, no harsh abrasives or chemicals to clean, as it will damage the surface finishing.
- 8. Non-Use Periods: The power cord of the speaker should be unplugged from the outlet when left unused for a long period of time.


## PACKING LIST


5 Audio cable .


1 User Manual ... 2 Speaker... 3 Wireless microphone ... 4 Type-C cable ...

 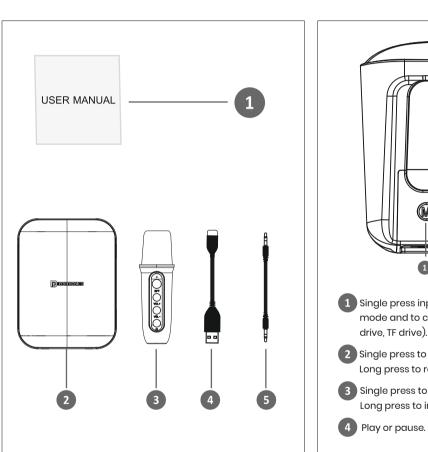


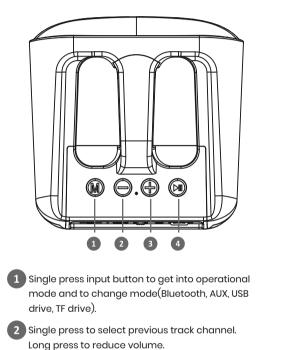

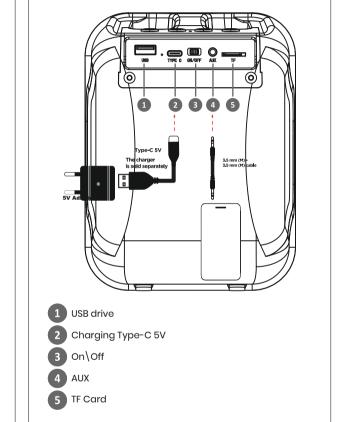

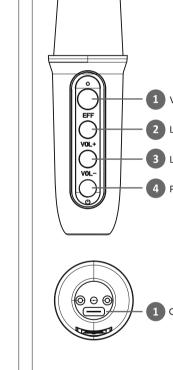

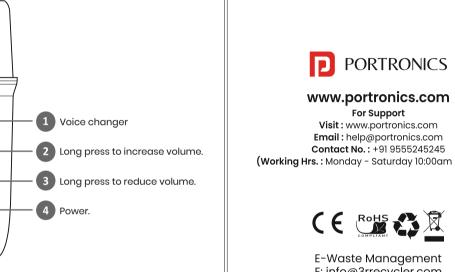



## www.portronics.com

Visit: www.portronics.com Email: help@portronics.com Contact No.: +91 9555245245

(Working Hrs.: Monday - Saturday 10:00am - 6:00pm)



E-Waste Management E: info@3rrecycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste

