 





AuraTrio

Bluetooth Speaker with Dual
Sync Satellite Speakers

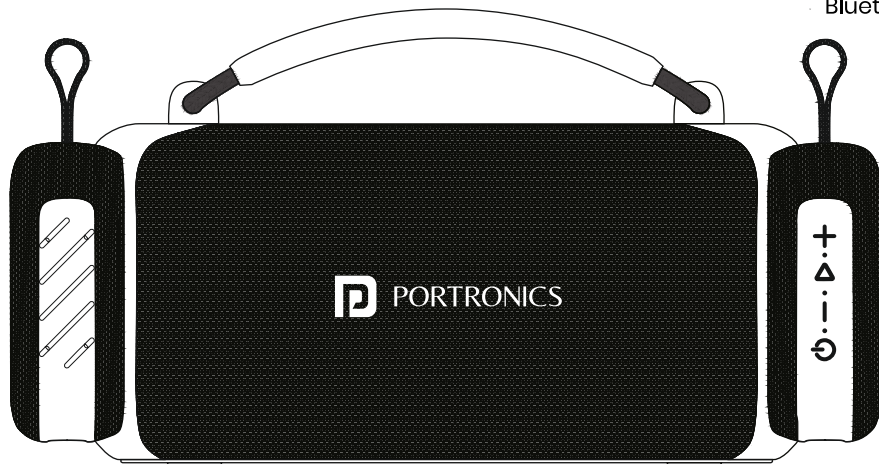


USER MANUAL

 
What's Inside

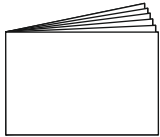

User Manual

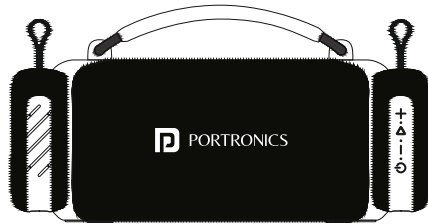 


Speaker

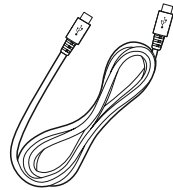 

USB-C Cable

Button Control

 Working Indicator Light

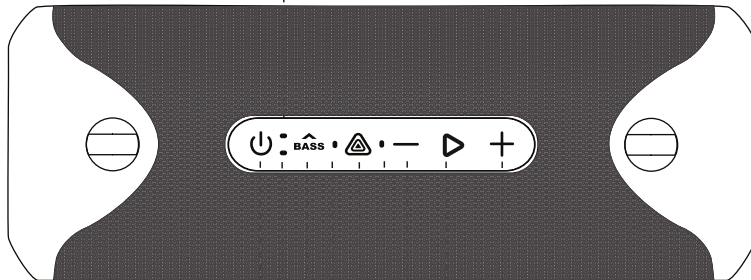

Long Press Power On / Off

Short Press: Bluetooth / Aux / Usb Mode

Charging Indicator Light

Short Press Toswitch Bass

Bassboost Indicator Light



 
Play / Pause




Auracast Light

Short Press - Enter/exit Auracast

Button Control

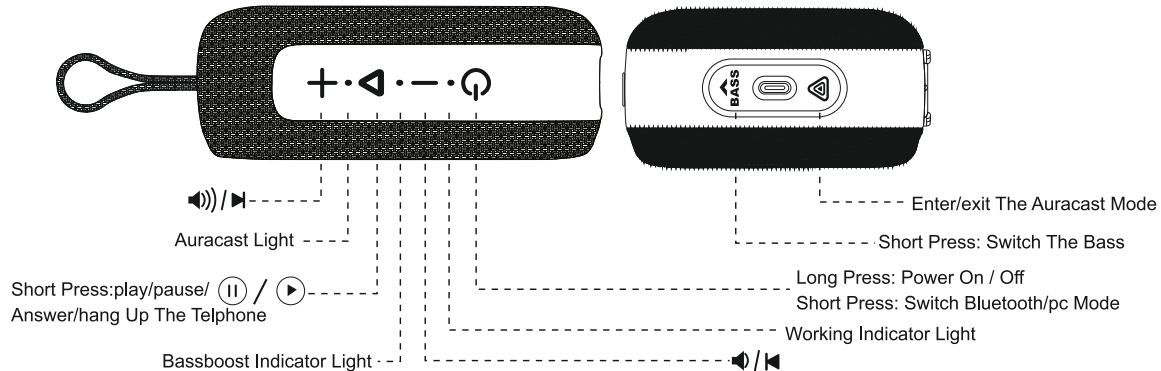


LED Indication

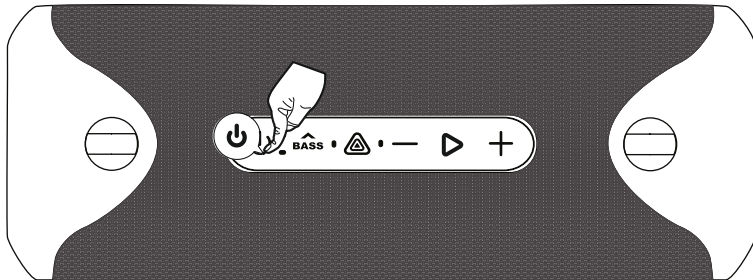 

- Short press  to switch mode .

Status	LED indication
  Working mode	 Blue light glowing
 Pairing mode	 Blue light blinking
 Charging	 Red light
 Fully charged	 Red light off
 AURACAST Paired main&Slave one	 Green light glowing
 Auracast disconnect main one	 Green light off
 Auracast disconnect slave one	 Green light glowing or off
 Bass on	 White light glowing

 Auracast Pairing Instructions

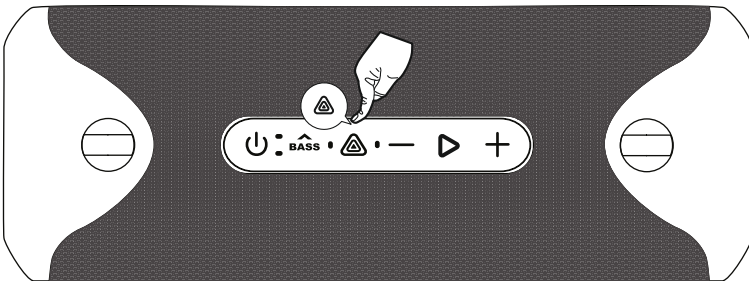

Follow the steps below to connect multiple speakers using Auracast and set up left/right channel placement correctly.

1. Auracast Pairing

Step	Instruction
Step 1	Power on all speakers.
Step 2	Short press the Auracast button on each speaker. The speakers will automatically connect with each other.
Step 3	Once the speakers are connected, the green indicator light will stay ON.
Step 4	Open the Bluetooth settings on your phone, tablet, or other device.
Step 5	Search for the speaker name and connect to one speaker only.
Step 6	The speaker connected to your Bluetooth device will work as the Master Speaker. The other connected speakers will work as Slave Speakers.

2. Left & Right Channel Placement

- Place one AuroTrio L speaker on the left side of the A80. This will work as the Left Channel.
- Place the other AuroTrio R speaker on the right side of the A80. This will work as the Right Channel.
- The AuroTrio L/AuroTrio R speaker will be marked with L or R to show the left or right channel.



3. To Disconnect Auracast Pairing

- Short press the Auracast button on any speaker to disconnect that speaker from Auracast pairing.
- Short press the Auracast button on the Master Speaker to disconnect all speakers from the Auracast connection.

Quick Note

For best performance, keep all speakers within a stable wireless range and make sure each speaker has sufficient battery before pairing.

Specification

Product mode	AuraTrio
Transducers	Woofer: 100mm*120mm*1pc Tweeter: Φ45mm*2pcs 2pcs passive radiators
Output	90W (60W +15W + 15W)
Battery Type	Li-ion battery 7.2V 4500mAh 32.4Wh
Battery Charging time	About 2.5 hours (Use 30W charger)
Cabel type	Type-C charging cable
Cabel length	0.8m

Bluetooth version	V5.4
Bluetooth tranmittter frequency range	2402 MHz-2480 MHz
Funtcion	BT/AURACAST/BASSBOOST/USB/AUX IN/Power bank/PD IN(max 30W)
Waterproof	IPX6
Product dimentions (W*H*D)	313* 165*115mm
Net weight	2250g
Packaging dimentions (W*H*D)	354x200x165mm

Specification

Product mode	AuroTrio L/ AuraTrio R
Output	15W
Battery Type	Li-ion battery 3.7V 2000mAh
Battery Charging time	About 3 hours
Cabel type	Type-C charging cable
Cabel length	0.8m
Bluetooth version	V5.4
Funtcion	Bluetooth/Auracast/Bass/Support DAC
Waterproof	IPX6
Product dimentions (W*H*D)	126*92*48mm
Net weight	319g



www.portronics.com

For Support

Visit : www.portronics.com

E-mail : help@portronics.com

Contact No.: +91 9555245245

(Working Hours: Monday – Saturday, 10:00am – 6:00pm)



E-Waste Management

E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste