

# Breeze 7 15W Portable Wireless Speaker



Thank you for purchasing the Breeze 7 Portable Speaker!
Please read this manual carefully to ensure proper use and
avoid any damage to the device.

#### USER MANUAL

button for 2 seconds. You'll hear a sound when the speakers pair successfully.

- Play Music: Connect your phone via Bluetooth to play music on both speakers.
- Exit TWS: Long press the backward button for 2 seconds to disconnect.

### RGB Lighting

The RGB lights turn on automatically when the speaker is powered on.

#### Hands-Free Calling

- Answer Call: Short press the power button to accept a call.
- Reject Call: Long press the power button for 2 seconds
- End Call: Short press the power button or use your phone.
- Switch to Phone: Long press the power button for 2 seconds to transfer the call to your phone.

#### What's in the Box

- · 1x Bluetooth Speaker
- 1x Type-C Charging Cable
- 1x Lanyard
- 1x User Manual

#### Features


- Portable Bluetooth fabric speaker with 2.0 channel stereo sound
- TWS (True Wireless Stereo) function for enhanced stereo sound
- Built-in hands-free microphone for calls
- RGB lighting for added style
- Wireless music streaming via Bluetooth (A2DP)
- USB playback support
- Built-in 1800mAh rechargeable battery
- Easy to carry with the included lanyard

#### Specifications

- Bluetooth Version: V5.4
- Speaker Size: 2 inches x 2
- Power Output: 15W, 4Ω
- Battery Capacity: 1800mAh (3.7V)
- Frequency Response: 80Hz 18kHz
- Bluetooth Range: 10 meters
- Dimensions: 78mm (Diameter) x 200mm (Height)

#### **Product Details**

- 1. Forward
- 2. Power On/Off
- 3. USB Port
- 4. Charging Port
- 5. Backward

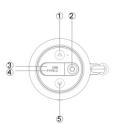

#### How to Use

#### Power On / Off

- Turn On: Press and hold the power button for 2 seconds.
- Turn Off: Press and hold the power button for 2 seconds in any mode.

#### Auto Power Off

The speaker will automatically turn off after 10 minutes if:

- No Bluetooth connection or music for over 10 minutes.
- In USB mode and paused for 10 minutes.

## **Bluetooth Mode**

- Turn On Bluetooth: When powered on, the speaker automatically enters Bluetooth mode.
- Pairing: On your phone, search for and select
   "Breeze 7" to connect. The blue light will blink while
   pairing and stay on once connected.

#### Music Control

- Use the forward/backward buttons on the speaker or your phone to change songs.
- Rotate the volume knob clockwise to increase volume and counter clockwise to decrease.
- 3. Press the power button to play/pause music or double press to activate the voice assistant.
- Disconnect Bluetooth: Long press both the forward and backward buttons together for 2 seconds

## TWS (True Wireless Stereo) Pairing

- Turn on Two Speakers : Make sure both are in Bluetooth mode.
- Pairing: On one speaker, long press the backward

## USB Playback Mode Charg

- Switch Mode: Long press the forward button to change modes.
- · Control Music:

FM Radio

Factory Reset

- 1. Short press the forward/backward buttons for the next/previous song.
- 2. Short press the power button to play/pause.

Forward Button: long press forward button to switch

Power Button: Short-press is mute, double click Search

Reset Device: Long press both forward and backward buttons for 5 seconds to restore factory settings and

the modes, Short-press for previous song.

the station and save automatically

clear Bluetooth pairing records.

Backward: Short-press for next song.

# Charging the Speaker

- Charging: Use a standard 5V/2A charger. The charging time is about 2.5 hours.
- Low Battery : A red light will blink when the battery is 1. low.

While Charging : The red light stays on. It will turn off 2. once fully charged.

**Note**: Do not use the speaker while charging to protect the battery.

# Safety Tips

- Keep the speaker in a normal temperature environment.
- Avoid exposure to water or moisture.
- Do not disassemble or modify the speaker.
- Clean with a soft cloth, using water if necessary.
- Avoid using the speaker at maximum volume for long periods.

Enjoy your Breeze 7 Portable Bluetooth Speaker!



#### www.portronics.com

# For Support Visit: www.portronics.com

Email: help@portronics.com Contact No.: +91 9555245245

(Working Hrs.: Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste

## Important Notes

- Default volume is set to 50%.
- Playtime varies based on volume and music style.
- Do not charge other devices via the speaker's USB port.