

Magnetic Wireless Powerbank
CHYRO

Safety Instructions

 
 
INTRODUCTION

Thank You For Purchasing Chyro Power Bank by Portronics! This 10,000mAh device charges your smartphones and USB devices on the go with a sleek design and LED Indicator. This manual covers its features and usage. Thanks for choosing Portronics!

PACKAGE CONTAINS

- Powerbank X 1 N
- USB Charging Cable X 1 N
- User Manual X 1 N

PRODUCT OVERVIEW

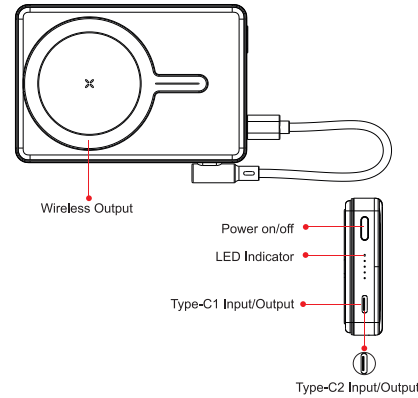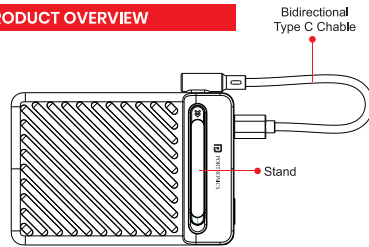

TECHNICAL SPECIFICATIONS


Battery : Li-Polymer
 Battery Power : 38.5Wh 10000mAh
 Input : Type-C1, Type-C2
 Output : Type -C1, Type-C2 and Wireless Charging
 Type-C1/C2 Input : 5V \Rightarrow 3A, 9V \Rightarrow 2A
 Type-C1/C2 Output : 5V \Rightarrow 3A, 9V \Rightarrow 2.22A, 12V \Rightarrow 1.67A
 Product Size : 98 x 67 x 18mm (without cable)
 Weight : 198 gm

GETTING STARTED

1. CHARGING YOUR POWERBANK

To charge your power bank, connect the Type-C port located on the power bank to a USB-A port or USB-C charger using the provided charging cable. Once charging begins, the LED Indicator will blink.

Percentage	LED 1	LED 2	LED 3	LED 4
0 - 25%	Blinking	Off	Off	Off
26 - 50%	On	Blinking	Off	Off
51 - 75%	On	On	Blinking	Off
76 - 100%	On	On	On	On
Abnormal	Blinking	Blinking	Blinking	Blinking

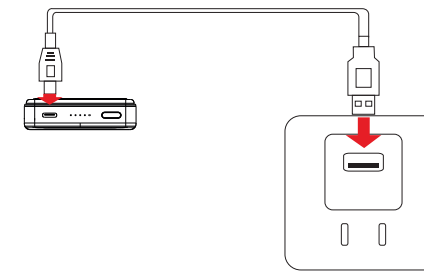 


2. USING THE POWER BUTTON

- A button is located on the top of the Mobile Power Bank.
- Press the button once to turn on the power bank and view the remaining battery capacity on the LED Indicator.

3. CHARGING YOUR MOBILE PHONE

 To charge your mobile phone using the power bank, simply connect your device using Type-C Port with the provided charging cable.

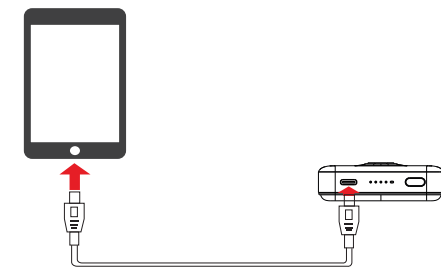


WIRELESS CHARGING

To charge a magsafe wireless mobile using wireless charging-enabled device, simply place it on the designated wireless charging area of the power bank. Charging will begin automatically.

WIRELESS CHARGING TIPS

 - Place your wireless charging-enabled device within the designated wireless charging area of the power bank (refer to the diagram for the location of the wireless charging coil).
- Adjust the position of your device to ensure it is within the wireless charging range for optimal performance.

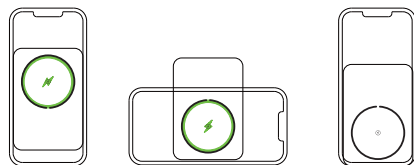

(✓) (✓) (✗)

SAFETY INSTRUCTIONS

1. STORAGE

- Store in a Safe Environment: Keep the power bank in a cool, dry place. Avoid direct sunlight, excessive heat (such as inside a parked car), or freezing temperatures.
- Partial Charge for Long-Term Storage: If not used for a long period, store the power bank at 50-60% charge.
- Avoid Moisture: Keep away from water or humid conditions to prevent short circuits or corrosion.

2. HANDLING & USAGE SAFETY

- Inspect Regularly: Stop using the power bank if you notice swelling, cracks, or exposed wires.
- Avoid Physical Impact: Do not drop, crush, or apply pressure.
- Keep Away from Metal Objects: Avoid contact with coins, keys, or metal items.
- Prevent Overheating: If it becomes unusually hot, unplug and allow it to cool.
- Do Not Disassemble: Never open or repair the power bank yourself.
- Do Not Keep in Pockets During Use: Avoid keeping the power bank in your pocket while it is operating. Always hold it in your hand or place it on a flat, open surface.

3. CHARGING INSTRUCTIONS

- Use Correct Cable & Charger: Use the provided or certified high-quality accessories only.
- Avoid Overcharging: Unplug once fully charged.
- Do Not Overcharge Overnight: Avoid leaving the power bank plugged in overnight.
- Do Not Charge & Discharge Simultaneously.
- Charge in a Safe Area: Place on a flat, non-flammable surface.

4. UNSAFE USAGE CONDITIONS

- Do not place on beds, cushions, or under pillows.
- Do not store in pockets or bags with metal objects.
- Keep away from heaters or radiators.
- Do not leave on car dashboards under sunlight.

5. LOAD & PERFORMANCE SAFETY

Do Not Overload: Connect only devices within the rated output capacity.

6. AIR TRAVEL SAFETY

- Carry power banks only in hand baggage.
- Do not charge devices using the power bank during flights.

7. FIRE SAFETY

- In Case of Fire: Use a Class D fire extinguisher or sand.
- Do Not Use Water.

8. DISPOSAL & RECYCLING

Dispose responsibly at authorized electronic waste recycling centers.

HANDLING A SWOLLEN POWER BANK

If your power bank swells, stop using it immediately and unplug it carefully, placing it on a non-flammable surface away from flammable items, people, and pets to avoid risks like leaks or explosions. Do not puncture or open it; instead, let it cool down and dispose of it at an electronics recycling center per local rules—never in regular trash. Contact the manufacturer for further advice

IMPORTANT NOTE

The company will not be responsible for any damage, injury, or malfunction resulting from improper usage, mishandling, or failure to follow the manufacturer's instructions



E-Waste Management
 E: info@3rrecycler.com
 For E-Waste & ROHS compliance refer to www.portronics.com/ewaste

www.portronics.com

For Support
 Visit : www.portronics.com
 Email : help@portronics.com
 Contact No. : +91 9555245245
 (Working Hours.: Monday - Saturday 10:00am - 6:00pm)