



FoamMatic


Rechargeable Electric Foam Sprayer



User Manual

PRODUCT OVERVIEW

Portronics FoamMatic is an electric foam sprayer designed for easy car cleaning, household cleaning, and foam-based washing. It helps spray foam evenly with minimal effort, making cleaning faster, smoother, and more convenient.

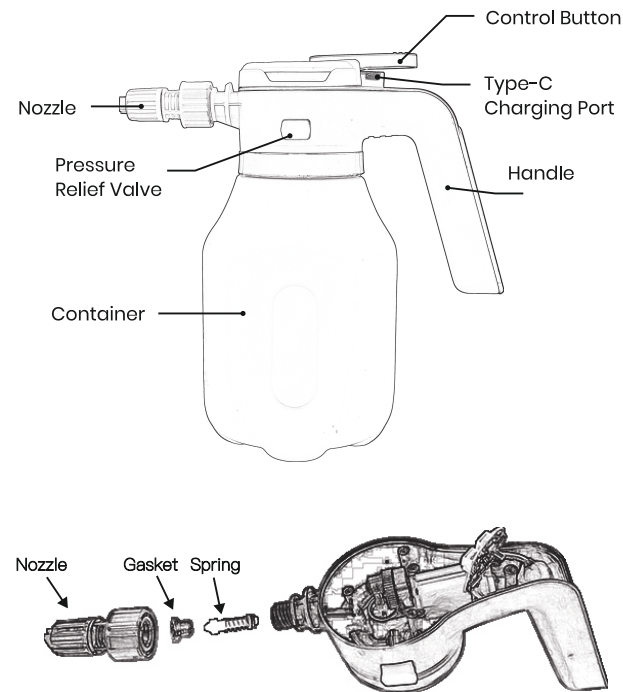

IMPORTANT SAFETY INSTRUCTIONS

- Do not spray hot water. Let the liquid cool before use.
- Do not use flammable liquids, corrosive chemicals, or explosive liquids.
- Do not use highly viscous or sticky liquids, as they may damage the sprayer.
- Use only liquid detergent or liquid foam solution. Do not use powdered detergents, washing powder, or granular cleaning agents, as they may clog the nozzle, pipe, or internal spraying system.
- Do not point the nozzle toward people, animals, electrical appliances, or fragile objects.
- Do not disassemble or modify the product.
- Keep the product away from children.
- If the product is damaged, leaking, overheating, or working abnormally, stop using it immediately.

TECHNICAL SPECIFICATIONS

- Product Name – Portronics FoamMatic
- Product Type – Electric Foam Sprayer
- Battery Capacity – 2x 1500mAh
- Charging Time – 2-3 Hours
- Maximum Working Pressure – 3.8 Bar

PACKAGE CONTENTS

- 1 × Portronics FoamMatic
- 1 × Charging Cable
- 1 × Accessory Bag
- 1 × User Manual

CHARGING INSTRUCTIONS

- Open the cover to access the charging port.
- Insert the Type-C charging cable into the charging port.
- Connect the USB end to a suitable power source.
- The indicator light will blink while charging and stabilises once fully charged.

HOW TO USE

1. Install the Nozzle

Install the nozzle and gasket properly as shown in the product diagram. Make sure the nozzle is fitted in the correct direction and tightened securely.



2. Fill Water & Liquid Detergent

- Open the bottle lid and fill the tank with clean water and liquid detergent / foam solution in the recommended proportion.
- Note: Use only liquid detergent. Do not use powdered detergent, washing powder, or granular cleaning agents, as they may clog the nozzle or internal pipe.




3. Close the Bottle

Tighten the lid properly. Shake the bottle gently to mix the liquid evenly.

4. Start Spraying

- Hold the handle, point the nozzle toward the cleaning surface, and press the Control Button.
- After a few seconds, the sprayer will build pressure and start spraying foam normally.

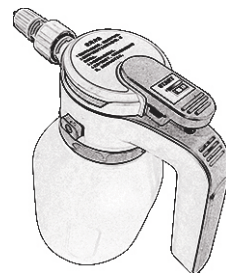

5. Stop Spraying

Press the control button again to stop spraying. After use, gently pull the pressure relief valve to release the remaining pressure inside the bottle.

Note : Do not open the bottle immediately after spraying. First release the internal pressure using the pressure relief valve, then open the lid safely.

6. Clean After Use

After the cleaning work is completed, pour out the remaining liquid and rinse the bottle and nozzle with clean water.

RECOMMENDED USAGE

Portronics FoamMatic is suitable for:

- Car washing
- Bike washing
- Household cleaning
- Garden cleaning
- Foam-based surface cleaning

* It works best with clean water and standard car wash liquid or compatible foam cleaning solutions.

NOT RECOMMENDED FOR

Do not use the product with:

- Acidic liquids
- Highly alkaline liquids
- Flammable liquids
- Explosive liquids
- Thick chemical liquids, Paints
- Strong industrial cleaners
- Hot water

*Using unauthorized liquids may damage the product and may void after-sales support.

TROUBLESHOOTING

- **Product does not start :**
Low battery – Charge the product fully
- **Weak foam/spray output :**
Nozzle blockage – Remove and clean the nozzle
- **Weak foam/spray output :**
Low pressure – Recharge or restart the sprayer
- **Liquid leakage :**
Lid not closed properly – Tighten the lid properly
- **No foam formation :**
Incorrect liquid ratio – Use the correct mix of water and foam liquid (advisable to mix 100 ml of detergent with 2L of water)
- **Product stops suddenly :**
Battery protection/low charge – Charge before next use

MAINTENANCE & CLEANING

- After every use, remove the motor/electronic part from the bottle and clean the bottle with fresh water.
- Do not wash the electronic components directly with water.
- Empty any remaining liquid from the bottle after use.
- Store the product in a cool and dry place.
- Keep the product away from fire, direct sunlight, and extremely hot environments.
- Clean and dry the sprayer properly before long-term storage.



www.portronics.com

For Support

Visit : www.portronics.com

Email: help@portronics.com

Contact No.: +91 9555245245

(Working Hours : Monday – Saturday, 10:00am – 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste