



FoamMatic

Rechargeable Electric Foam Sprayer




User Manual

PACKAGE CONTENTS

- 1 × Portronics FoamMatic
- 1 × Charging Cable
- 1 × Accessory Bag
- 1 × User Manual

PRODUCT OVERVIEW

Portronics FoamMatic is an electric foam sprayer designed for easy car cleaning, household cleaning, and foam-based washing. It helps spray foam evenly with minimal effort, making cleaning faster, smoother, and more convenient.

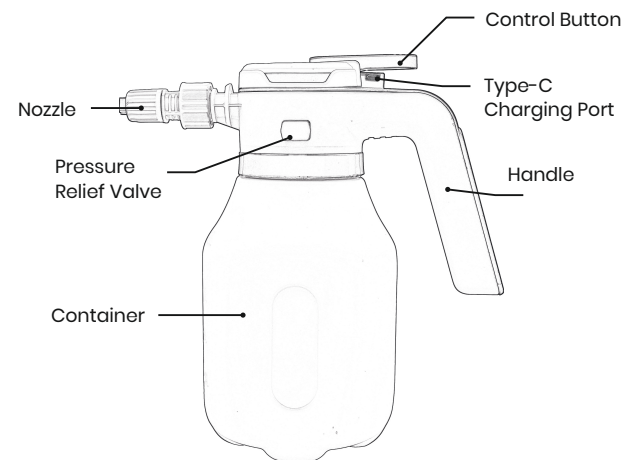

HOW TO USE

1. Install the Nozzle

Install the nozzle and gasket properly as shown in the product diagram. Make sure the nozzle is in the correct direction and tightened securely.



2. Fill Water & Liquid Detergent

- Open the bottle lid and fill the tank with clean water and liquid detergent / foam solution in the recommended proportion.
- Note: Use only standard vehicle washing detergent. Do not use powdered detergent, washing powder, or granular cleaning agents, as they may clog the nozzle or internal pipe.



3. Close the Bottle

Tighten the lid properly. Shake the bottle gently to mix the liquid evenly.

4. Spraying


There are two Spraying Modes.

Mode 1:

Single press the control button to start and stop spraying.

Mode 2:

Long press and hold the control button to start spraying and release the button to stop spraying.

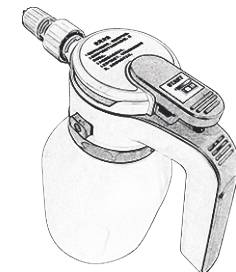

5. Pressure Relief Value

Release the excess air in the container by pulling the pressure relief value.

6. Clean After Use

After the cleaning work is completed, pour out the remaining liquid and rinse the bottle and nozzle with clean water.

CHARGING INSTRUCTIONS

- Open the cover to access the charging port.
- Insert the Type-C charging cable into the charging port.
- Connect the USB end to a suitable power source.
- The indicator light will blink while charging and stabilises once fully charged.

RECOMMENDED USAGE

Portronics FoamMatic is suitable for:

- Car washing
- Bike washing
- Household cleaning
- Garden cleaning
- Foam-based surface cleaning

* It works best with clean water and standard car wash liquid or compatible foam cleaning solutions.

NOT RECOMMENDED FOR

Do not use the product with:

- Acidic liquids
- Highly alkaline liquids
- Flammable liquids
- Explosive liquids
- Thick chemical liquids, Paints
- Strong industrial cleaners
- Hot water

*Using unauthorized liquids may damage the product and may void after-sales support.

TECHNICAL SPECIFICATIONS

- Product Name - Portronics FoamMatic
- Product Type - Electronic Foam Sprayer
- Battery Capacity - Lithium ion 3.7V/1500mAh x 2 Cells
- Charging Time - 2-3 Hours

TROUBLESHOOTING

- **Product does not start :**
Low battery - Charge the product fully
- **Weak foam/spray output :**
Nozzle blockage - Remove and clean the nozzle
- **Weak foam/spray output :**
Low pressure - Recharge or restart the sprayer
- **Liquid leakage :**
Lid not closed properly - Tighten the lid properly
- **No foam formation :**
Incorrect liquid ratio - Use the correct mix of water and foam liquid (advisable to mix 100 ml of detergent with 2L of water)
- **Product stops suddenly :**
Battery protection/low charge - Charge before next use

MAINTENANCE & CLEANING

- After every use, remove the motor/electronic part from the bottle and clean the bottle with fresh water.
- If you wash the electronic parts with water it will get damaged, and this will not come under warranty.
- Empty any remaining liquid from the bottle after use.
- Store the product in a cool and dry place.
- Keep the product away from fire, direct sunlight, and extremely hot environments.
- Clean and dry the sprayer properly before long-term storage.

IMPORTANT SAFETY INSTRUCTIONS

- Do not spray hot water. Let the liquid cool before use.
- Do not use flammable liquids, corrosive chemicals, or explosive liquids.
- Do not use highly viscous or sticky liquids, as they may damage the sprayer.
- Use only liquid detergent or liquid foam solution. Do not use powdered detergents, washing powder, or granular cleaning agents, as they may clog the nozzle, pipe, or internal spraying system.
- Do not point the nozzle toward people, animals, electrical appliances, or fragile objects.
- Do not disassemble or modify the product.
- Keep the product away from children.
- If the product is damaged, leaking, overheating, or working abnormally, stop using it immediately.



www.portronics.com

For Support

Visit : www.portronics.com
Email: help@portronics.com
Contact No. : +91 9555245245
(Working Hours : Monday - Saturday, 10:00am - 6:00pm)



E-Waste Management
E: info@3recycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste