



FREEDOM FOLD

15W Foldable Wireless Charger




SUPPORT
MAGNETIC
CHARGING

User Manual

SPECIFICATION

| | |
|--------------------|-----------------------|
| Type-C Input: | 5V/2A 9V/2.5A 12V/2A |
| Wireless Output: | 5W/7.5W/10W/15W (max) |
| Charging Distance: | ≤ 6 mm |

PRODUCT OVERVIEW

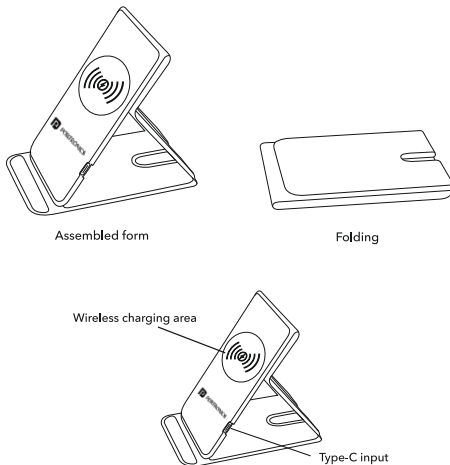

INSTRUCTIONS

- Connect the USB-C cable to the Freedom Fold charger and connect the USB side to a 5V/2A, 9V/2.5A, or 12V/2A adapter.
- Place the mobile phone in the center of the wireless charging area.

WARNINGS

Note: Please pay attention to the following instructions or it may cause improper charging, high charging temperatures, intermittent charging, or even no charging.

- Ensure there are no metal objects on the surface of the wireless charger or on the back of the phone. If the phone case is metal, please remove it before charging.
- Avoid using this product in severely hot, humid, or corrosive environments to prevent damage to its electrical circuit.
- Avoid striking or crushing this product.
- Do not disassemble or modify the product.
- Keep any cards, including ID cards and bank cards with a magnetic strip/chip, away from or not on the wireless charger to avoid corrupting the card.



www.portronics.com

For Support

Visit : www.portronics.com

E-mail : help@portronics.com

Contact No: +91 9555245245, 011-42413131

(Working Hrs: Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste