



HARMONICS TWINS 33

Smart TWS Earbuds

User Manual

PACKAGE CONTENTS

1. Harmonics Twins 33 2N
2. Cable 1N
3. User manual 1N
4. Charging case 1N

POWER ON

- From Charging Case: Open the case cover; earbuds will power on, pair with each other, and attempt to reconnect to the last paired device. (Orange light on for 1s)
- From Off State: Long press L/R touch button for 3s to power on. (Orange light on for 1s)

BLUETOOTH PAIRING

- Ensure both earbuds are on and paired together.
- The main earbud enters pairing mode automatically.
- On your device, enable Bluetooth and select the earbuds from the device list. (LED alternates between white & orange while pairing)

PAIRING SUCCESSFUL

- A voice prompt confirms the connection.
- No LED flashing once connected.

AUTOMATIC RECONNECTION

- When powered on, earbuds reconnect to the last connected device automatically.
- No LED flashing during reconnection.

SWITCHING BETWEEN MAIN & SECONDARY EARBUDS

- Place the main earbud in the charging case; the secondary becomes the main without pausing music.
- Similarly, placing the secondary earbud in the case keeps playback on the main earbud.

RECONNECT FROM MOBILE

- After manual disconnection from the phone, reconnect by selecting the earbuds in the Bluetooth menu.

RECONNECTION AFTER GOING OUT OF RANGE

- Automatically reconnects when back within range.
- If not, tap the touch key to connect manually.

SHUTDOWN

- Earbuds auto power off if not connected within 5 minutes.
- Long press L/R touch key for 5s to power off manually.

ANC MODE SWITCHING

Long press L/R touch button for 2s.

VOICE ASSISTANT

Triple tap L/R touch button to activate Siri or other voice assistants.

MUSIC CONTROLS

- Play/Pause: Single tap L/R button.
- Next Track: Double tap R button.
- Previous Track: Double tap L button.

CALL CONTROLS

- Answer Call: Double tap touch key.
- Reject Call: Press & hold touch key for 2s.
- End Call: Double tap during call.

BATTERY STATUS

Battery level shown on connected device's screen.

LOW BATTERY

- Below 3.3V: Low battery prompt every 30s.
- Below 3.2V: Auto power-off.

CHARGING

- Place earbuds in charging case. Orange LED on earbuds stays for 10s then turns off; case white LED stays on.
- Fully charged earbuds & case show no LED light.

LED INDICATOR GUIDE

Earbuds :

- Colors : White, Orange
- Pairing Mode : White & orange LED flashing alternately
- Connected : No LED
- Charging in Case : Orange light on 10s then off

Charging Case :

- Charging Earbuds : White light on
- Case Charging : Orange light flashing
- Case Fully Charged : Orange light solid
- Low Battery in Case : White light flashing

SPECIFICATIONS

- Bluetooth Version : 5.4
- Wireless Range : Up to 12m
- Charging Time (Earbuds) : 1.5 hours
- Charging Time (Case) : 2 hours
- Battery Capacity (Earbuds): 35mAh (each)
- Battery Capacity (Case) : 400mAh
- Charging Port : Type-C
- Driver Unit : 13mm dynamic driver, 32 Ω , sensitivity 108dB \pm 3dB
- Microphone : Dual mic with ANC + ENC
- Wearing Style : In-ear, touch control
- Indicator Lights : Orange & White



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 8:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste