



PORTRONICS



HARMONICS Z11 Pro

Wireless Stereo Headset

User Manual

Package Contains

1. Harmonics Z11 Pro
2. Charging Cable
3. Earbuds
4. User Manual

Product Functions

- A. Earbuds
- B. Magnetic Hall Switch
- C. Volume Up/Next Track
- D. MFB (Multifunctional) Button
- E. Volume Down/Previous Track



- Power On:** Separate the earphones from each other.
Voice Prompt: "Power On, Your Device is Ready to Pair" (vibration for 1s).
LED: Red & Blue lights flicker.
- Power Off (Auto):** If no Bluetooth connection is made within 5 minutes, the earphones turn off.
Voice Prompt: "Power Off".
LED: Lights off.
- Low Battery Auto Off:** Shuts down if battery is below 3.1V.

Pairing & Bluetooth

- First Time Pairing:** Automatically enters pairing mode after power on.
LED: Red & Blue lights flash alternately.
- Connect Bluetooth:** Turn on Bluetooth on your phone → Select device name → Click connect.
Voice Prompt: "You are now connected".
LED: Blue light flashes once every 5s.
- Disconnect Bluetooth:** Manually disconnect from phone.
Voice Prompt: "Device Disconnected".
LED: Red & Blue lights flash alternately.
- Auto Reconnection:** When powered on, device reconnects automatically to the last paired phone.
Voice Prompt: "Power On, Your Device is Ready to Pair. You are now connected".
LED: Blue light flashes once every 5s.
- Over-Distance Reconnection:** If disconnected due to distance, reconnects automatically when back in range.
Voice Prompt: "You are now connected".
LED: Blue light flashes once.

Calling Functions

- Answer Call:** Press Function Button once.
LED: Blue light flashes 5 times.
- Reject Call:** Long press Function Button (3s).
- Incoming Call:** Device rings + vibration (1s interval × 5 times).
- Last Redial:** Double-click Function Button.
Voice Prompt: "DO".
- Voice Assistant:** Press & hold Function Button for 1.5s.

Music Control

- Play Music:** Press Function Button once.
- Pause Music:** Press Function Button once.
- Next Song:** Long press "Volume +" button.
- Previous Song:** Long press "Volume -" button.
- Volume +:** Click "Volume +" button.
Prompt: Beep beep (max volume).
- Volume -:** Click "Volume -" button.
Prompt: Beep beep (min volume).

Products Specification :

BT Version : 5.4
Driver Size : 10mm
Wireless Frequency : 2402-2480MHz
Working Distance : 10m
Charging Port : Type-C (5V/1A)
Playtime : Upto 35 hrs.
Working Temperature Range : -20°C - 50°C

Charging & Battery

- Charging:** Red light stays ON while charging.
- Fully Charged:** Blue light stays ON.
- Low Battery:** Voice Prompt - "Low Battery, Please Charge" (repeats every 30s).
LED: Red light flashes.

PORTRONICS

www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste