



PORTRONICS

IRON BEATS 5 Portable Party Speaker



Please carefully read the operating instruction before using our product

User Manual

POWER ON & BLUETOOTH MODE

- Switch on the speaker.
- The device will automatically enter Bluetooth Mode.
- On your smartphone or music device, turn on Bluetooth and search for the speaker model name.
- Select it to pair. Once paired, the device will automatically reconnect when turned on subsequently.

Controls in Bluetooth Mode:

- ▶/II (Play/Pause): Short press to play or pause music.
- ⏪ (Previous): Press to go to the previous track.
- ⏩ (Next): Press to go to the next track.

TWS (TRUE WIRELESS STEREO) PAIRING

- Power on two identical speakers.
- On one speaker, press and hold the MODE (M) button for 5-10 seconds.
- A tone will indicate TWS activation.
- The second speaker will also give a tone once the connection is successful.

Note:

TWS works only in Bluetooth Mode.

USB / TF CARD PLAYBACK

- Insert a USB flash drive or Micro-TF card (up to 32GB) into the slot.
- The speaker will automatically detect and start playing MP3 files.

Controls in USB/TF Mode:

- ▶/II (Play/Pause): Short press to play or pause music.
- ⏪ (Previous): Press to go to the previous track.
- ⏩ (Next): Press to go to the next track.

AUX-IN Mode

- Connect an external device using the AUX cable.
- Press the MODE (M) button to switch to AUX Mode.

Note:

- In AUX Mode, track control (Next/Previous) must be done from the connected device, not from the speaker.

CHARGING THE SPEAKER

- Use the **original charging cable** provided with the speaker.
- Connect it to a **DC 5V/2A USB Adapter**.
- A **Red LED indicator** will turn on while charging.
- Charging time via 5V/2A Adapter **Approx. 3-4 hours**.

BATTERY BACKUP

- Wireless Mode: Approx. 6-7 hours at 50% volume.
- USB Mode: Approx. 6-7 hours at 50% volume.

ACCESSORIES INCLUDED

- Charging Cable - 1 piece
- Aux Cable - 1 piece
- Wireless Microphone - 2 piece

SAFETY & CARE INSTRUCTIONS

- Use only the provided charging cable for best performance.
- Do not disassemble, repair, or modify the speaker yourself.
- Keep away from water, heat, and strong magnetic fields.
- Disconnect the charging cable once fully charged.

TROUBLESHOOTING GUIDE

Issue	Possible Cause	Solution
Speaker not turning on	Battery drained	Charge the speaker for at least 30 minutes before use

Bluetooth not connecting	1. Device not in pairing mode 2. Already connected to another device	1. Restart speaker & enable Bluetooth mode 2. Disconnect other devices and re-pair
--------------------------	---	---

No sound after connection	Volume too low / muted on device	Increase the volume on both speaker and connected device
---------------------------	----------------------------------	--

USB/TF card not working	1. Unsupported format 2. Card not properly inserted	Ensure files are in MP3 format and re-insert the card/USB drive
-------------------------	--	---

AUX-IN not playing	Loose cable connection	Check the AUX cable and reinsert securely
--------------------	------------------------	---

Speaker not charging	1. Faulty cable 2. Power source issue	Use original cable and try another power adapter/USB port
----------------------	--	---

TWS not connecting	1. Speakers too far apart 2. Wrong procedure	Keep both speakers close, and repeat pairing steps
--------------------	---	--

3-Battery Cover


- Battery Capacity: 7.4V / 4500mAh
- Backup Time: Approx. 6-7 hours at 50% volume
- Charging Port - Type-C : 3-4 hours

Note:

Replace both batteries at the same time.

Do not mix old and new or different battery types.

HANDHELD / HEADSET MICROPHONE

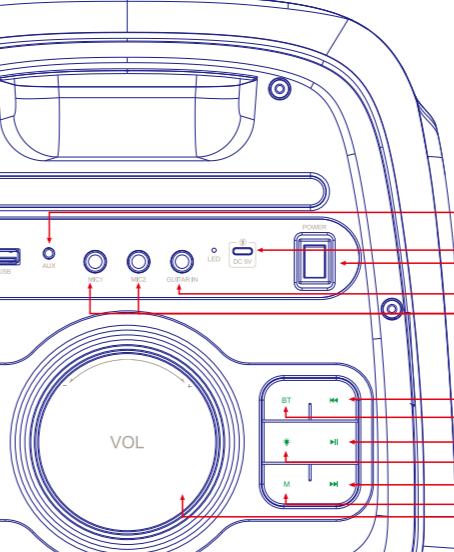

4. USB slot

Used to read the MP3 files in FAT32 format with maximum size of 32GB.

5. 3.5mm Mic Jack

Microphone

6. 3.5mm Guit. Jack

Guitar-in

7. 3.5mm Aux-in

Aux-in

8. VOL

To adjust the master volume

9. G.VOL

To turn down the guitar volume

10. G.VOL

To turn up the guitar volume

11. M.VOL

To turn down the MIC volume

12. M.VOL

To turn up the MIC volume

13. ECHO

To increase/decrease Echo

14. MUTE

To select MIC effect

15. M

To change or select mode. Long press to active TWS

16. Play/Pause

Under USB/TF mode, short press for play and pause;

17. PREV

Under USB/TF mode: Press to move previous track

18. NEXT

Under USB/TF mode: Press to move next track

19. light

Press to select light mode

20. B

Press to reset TWS mode

PORTRONICS
www.portronics.com
For Support
Visit: www.portronics.com
Email: help@portronics.com
Contact No.: +91 9552454254

(Working Hours: Monday - Saturday 10:00 am - 6:00 pm)
CE RCM FCC
WEEE Management
E: info@3recycle.com
For Waste & RoHS Compliance
refer to www.portronics.com/waste