

# **IRON BEATS 5 PRIME**

Portable Audio Speaker



Please carefully read the operating instruction before using our product

User Manual


#### PRODUCT DESCRIPTION

Output Power : 250 W

Speaker Drivers : 8" ×2 + 2.25" ×2 Product Size : 690 × 324.9 × 336.1 mm Battery : 12V / 7000 mAh (Lead-Acid)

Features: Bluetooth | AUX-IN (3.5 mm) | FM Radio | USB Playback/Recording | Mic Input | Guitar Input | 1× Wireless UHF Microphone | RGB LED Lights.

#### BUTTONS & FUNCTIONS

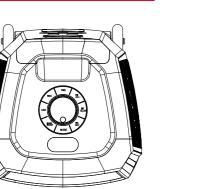

#### ower

Power Switch (rear): ON to power up, OFF to shut down.
On power-up you'll hear a voice prompt; the display shows HI
then BT. Default volume = 20

#### 2. MODE

- Short press: Cycle through BT → AUX → FM → USB (USB appears only when a drive is inserted).
- Long press: Toggle Vocal Cancel / Original Sound for karaoke.

Display shows VOC (ON) or OFF.

### 3. CH- / CH+

In BT/USB/FM: Short press for previous / next track or radio station.

### 4. SCAN / PLAY

- In BT/USB: Short press Play/Pause.
- Long press : Disconnect / reconnect Bluetooth without clearing
- pairing history.
- In AUX/FM: Short press Mute/Unmute.
- In FM: Long press Auto-scan and save stations.

### 5. TWS (True Wireless Stereo)

- Turn both speakers ON and set both to BT mode.
- Short press TWS on either unit → units auto-pair; you'll hear a prompt.
- Short press TWS again → disconnect TWS.
- Note: Powering OFF and ON disables TWS; pair again if needed.

## 6. REC (USB Recording)

- Insert a USB drive. Only in BT mode.
- Long press REC to start recording (display blinks REC).
- Long press REC again to stop.
- Short press REC to play the latest recording; short press again

to exit recording playback.

 While playing a recording, long press PLAY (SCAN/PLAY) to delete the current recording file.

## 7. LED (Light Effects & Mic Priority)

- Short press : Cycle through 4 light modes (not including OFF).
- Long press: Toggle Mic Priority (ducking). Display shows SHUN

  (ON) or OFF.

## 8. BASS / BOOST

In BT/AUX/USB: Short press to toggle Bass Boost. Display shows
BASS (ON) or OFF.

#### BACK PANEL - INPUTS & CONTROLS

- Power Switch: ON / OFF.
- AC IN : AC 110–240 V mains input (also charges the internal battery).
- ECHO: Reverb control for microphones.
- MIC : Microphone volume control.
- GUITAR : Guitar volume control.
- AUX : 3.5 mm stereo line-in.
- USB Port: For music playback and voice recording to USB drive.

#### GETTING STARTED

## 1. Bluetooth (BT) Music

- Power ON  $\rightarrow$  display shows BT.
- On your phone, enable Bluetooth and select the speaker name.
- Play music; use CH-/CH+ for previous/next, SCAN/PLAY for play/pause.

# 2. USB Music

- Insert a FAT32 USB drive with audio files.
- Press MODE to USB.
- Use CH-/CH+ and SCAN/PLAY to control playback

#### 3. AUX-IN

- Plug a 3.5 mm cable into AUX.
- Press MODE to AUX.
- Control playback from your source device; SCAN/PLAY mutes/unmutes.

## 4. FM Radio

- MODE to FM.
- Long press SCAN/PLAY to auto-scan and store stations.
- Use CH-/CH+ to step through saved stations.

## 5. Microphone & Guitar

- Connect wired mic to MIC input; adjust MIC volume and ECHO as desired.
- Connect guitar to GUITAR input; adjust GUITAR volume.
- To give mic priority (music ducks under voice), long press LED to show SHUN..

### BATTERY & POWER

- Built-in 12 V / 7000 mAh lead-acid battery.
- Use AC IN (110–240V) to run on mains and charge the battery.
- For longest life, avoid fully depleting the battery frequently and store charged.

## DISPLAY MESSAGES (QUICK REFERENCE)

- HI → BT : Startup sequence (Bluetooth ready)
- USB / AUX / FM : Current mode
- · VOC / OFF: Vocal-cancel ON/OFF
- REC (flashing): Recording in progress
- BASS / OFF : Bass Boost ON/OFF

• SHUN / OFF : Mic Priority ON/OFF

# WHAT'S IN THE BOX

- Party Speaker X 1N
- Wireless Microphone X 1N
- Charging Cable X 1N
- Aux Cable X 1N

## HELPFUL TIPS

- If Bluetooth won't connect, long-press SCAN/PLAY to disconnect/reconnect, then pair again.
- USB works best with FAT32 drives and common audio formats (e.g., Mp3).
- After a power cycle, TWS must be re-paired (by design).



www.portronics.com

For Support

Visit: www.portronics.com Email: help@portronics.com

Contact No.: +91 9555245245

(Working Hrs.: Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste