


70.00 mm

100.00 mm

100.00 mm

280.00 mm

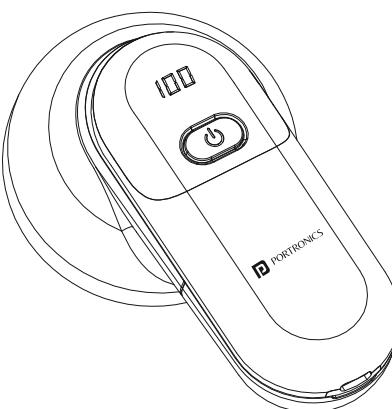

User Manual


Product Overview

Portronics Lint X is a high-speed rechargeable lint remover powered by a BLDC motor that operates up to 7200 RPM. It effectively removes lint, fuzz, and fabric pills, restoring clothes, sweaters, and upholstery to a smooth, new-like finish.

- Charging Time : Approx. 90 minutes
- Runtime : Up to 70 minutes
- Speed : Up to 7200 RPM

Package Contents

1 x Lint Remover
1 x USB Type-C Charging Cable
1 x Cleaning Brush
1 x User Manual

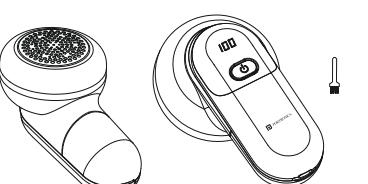

Product Specifications

- Charging Input : 5 V=1 A
- Rated Power : 5W
- Material : ABS + Electronic Components
- Battery Type : Rechargeable Lithium-ion
- Charging Port : Type-C

Key Features

- BLDC Motor (Up to 7200 RPM) – High-speed, low-noise performance.
- Six Stainless-Steel Blades – Sharp and durable for smooth trimming.
- 3-Speed Control – Adjustable modes for light to heavy fabrics.
- 120° Angled Blade Design – Wider cutting area for faster results.

Operating Instructions


1. Power On / Off & Speed Control

- Press once → Turns on the machine (Speed 1).
- Press twice → Switches to Speed 2.
- Press thrice → Activates Speed 3 (maximum).
- Press again → Turns off the machine and enters standby mode.

2. How to Use

- Spread clothes flat and remove any hard objects (buttons, zippers, etc.).
- Gently move the product over the fabric in circular motions.
- Do not press hard to avoid fabric damage.
- Avoid use on down jackets, thin lace, or embellished fabrics.

280.00 mm

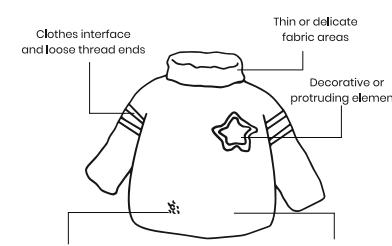

3. Charging & Indicators

- Connect the Type-C cable to a 5 V/1 A adapter.
- During charging, the LED numeric display counts up; it shows "100" when the battery is full.

4. Cleaning

- Detach the mesh cover and empty the lint container.
- Use the cleaning brush to remove any trapped lint or debris.
- Do not wash the machine with water. Wipe it with a damp cloth instead.

Safety Precautions

- Do not use the product while charging.
- Keep away from water, fire, and direct sunlight.
- Do not insert fingers or metal objects into the blade area.
- Do not disassemble or modify the product.
- Keep out of reach of children.
- Only charge in a room temperature (5 °C – 35 °C) environment.

Battery Care

- Do not remove or replace the battery yourself.
- Charge the product at least once every 6 months if not in use.
- Avoid exposing the battery to high temperatures or moisture.
- Dispose of the battery at an authorized recycling center.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
1. The machine does not work	a) Mesh cover not installed properly. b) Battery drained. c) Blade or fan stuck with debris.	<ul style="list-style-type: none"> Check if the mesh enclosure is securely fitted. Recharge the device fully. Inspect and remove any lint or fabric blocking the cutter head.
2. Hairballs are not cleaned completely	a) Blade dull or not close to the mesh. b) Lint container full or Mesh cover clogged.	<ul style="list-style-type: none"> Adjust blade height so it's close to the mesh. Clean the lint storage box and mesh cover.
3. The machine does not charge	a) Faulty adapter or loose connection. b) Type-C cable not connected properly.	<ul style="list-style-type: none"> Check the adapter and ensure cable is firmly connected. Confirm if the charging indicator light turns on.

PORTRONICS

www.portronics.com
For Support
Visit : www.portronics.com
Email: help@portronics.com
Contact No. : +91 9555245245
(Working Hours :
Monday - Saturday, 10:00am - 6:00pm)


E-Waste Management
E: info@3recycler.com
For E-Waste & ROHS compliance refer to www.portronics.com/ewaste