

PORTRONICS

LUMA

Rechargeable LED Flash
Light with Telescopic Zoom



User Manual

Product Overview

Portronics LUMA is a portable rechargeable torch designed for everyday lighting needs. It can be used as a focused flashlight, wide LED lamp, desk light, or hanging lantern.

Safety Instructions

1. Charge the product fully before first use.
2. Use only a 5V USB power source for charging.
3. Do not use the torch while charging.
4. Do not overcharge the product. Disconnect it once fully charged.
5. Do not immerse the product in water.
6. Keep the product away from fire, high heat, and direct moisture.
7. Do not open, repair, or modify the product yourself.
8. Keep away from children unless used under adult supervision.
9. Clean the product only with a soft, dry cloth.
10. Store the product in a cool and dry place when not in use


Specifications

Battery: 1500mAh rechargeable lithium-ion battery
Charging Port: USB Type-C
Charging Input : 5V/1A
Runtime: Spotlight: 2.5-3 hours, LED Lamp: 1-1.2 hours

Light Output: Spotlight: 150 LM ±30 LM, LED Lamp :
450 LM ±50 LM
Lighting Modes : Spotlight Mode and LED Lamp Mode

Product Description

1. Torch / LED Light Switch
2. Handle / Hanging Loop
3. Type-C Charging Port
4. Charging Indicator
Red Light: Charging
Green Light: Fully Charged
5. Torch Head to Adjust Focus

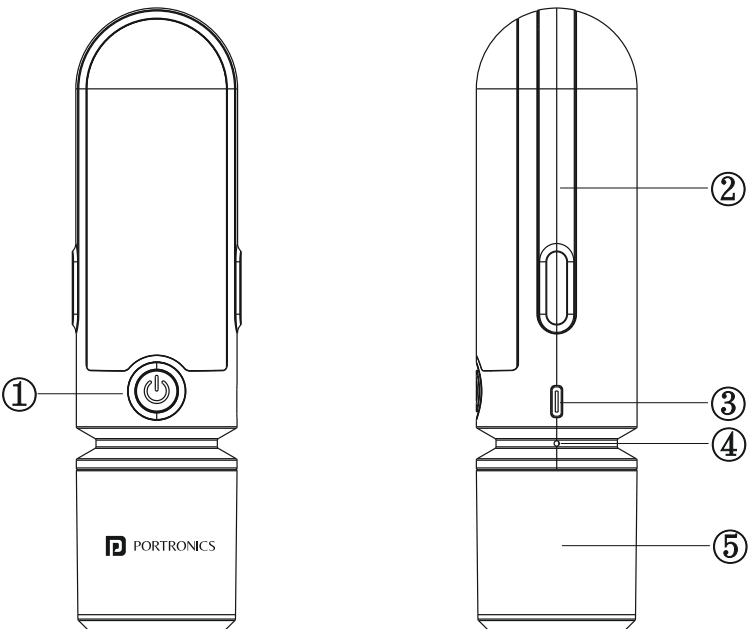

How to Charge

1. Low Battery Indication: Light output will diminish when battery is low. Recharge promptly.
2. Connect the Type-C charging cable to the charging port of the torch.
3. Connect the other end to a 5V USB power source such as a wall charger.
4. The indicator light will glow red while charging.
5. The indicator light will turn green when the battery is fully charged.
6. Remove the charging cable once charging is complete.

Charging Time: Approx. 4-5 hours

How to Use

- Power On / Off

First Press - Turns on the device in spotlight mode.

Second Press - The device switches to emergency flash mode.

Third Press - The device switches to LED lamp mode.

Fourth Press - The device turns off.

- Spotlight Mode with Emergency Flash Mode

Use the front torch light for focused long-distance lighting. Adjust the zooming head to switch the beam from wide to narrow.

- LED Lamp Mode

Use the side LED lamp for wider area lighting. This mode is suitable for desk use, camping, room lighting, or hanging use.

Hanging Lantern Use

Use the built-in handle / hanging loop to hang the torch while camping, working, or during power cuts.

Important Notes

1. If the light becomes dim, recharge the torch.
2. Do not leave the torch unused for a long time without charging.
3. For best battery life, charge the product once every few months when stored.
4. Always disconnect the charging cable after full charge.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste