



MAGMA PRO

Your Everyday Mist Diffuser



USER MANUAL

SAFETY & CARE


- Use only clean, room-temperature water. If using fragrance, add a few drops of water-soluble essential oil only.
- Do not operate without water. Keep the unit upright; never tilt while in use.
- Keep away from children, pets, heat sources, and direct sunlight.
- Unplug before filling, cleaning, or moving the unit.
- Do not disassemble, scratch, or insert objects into the mist outlet.
- Wipe spills immediately to avoid damage.

PACKAGE CONTENTS

1. Magma Pro 1 N
2. Power Cable 1 N
3. User Manual 1 N

PRODUCT SPECIFICATION


Input Voltage	DC 5V/2A
Power	6W
Water Cap.	200 ML

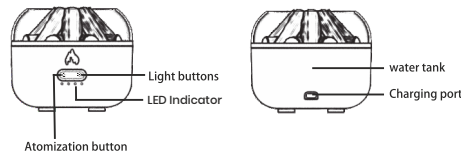

HOW TO USE

Quick start :

- Place the diffuser on a flat, stable surface. Connect the USB cable to a 5V/2A adapter.
- Open the lid: Hold the base and pull the lid straight up.
- Fill the tank with water up to, but not above, the inner fill line (leave some headroom).
- (Optional) Add 2–3 drops of water-soluble essential oil.
- Close the lid: Align and press the lid straight down until it sits flush.

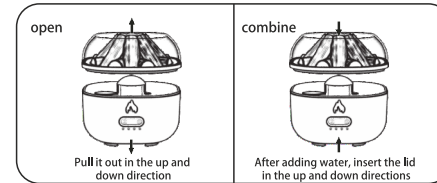

Operation :

- 1. Mist/Timer button
- Each short press cycles the timer; the corresponding LED turns on.
- 1st press: 1H (auto stop after 1 hour)
- 2nd press: 2H (auto stop after 2 hours)
- 3rd press: 3H (auto stop after 3 hours)
- 4th press: 4H (auto stop after 4 hours)
- 5th press: OFF
- Long press (any time): Turn mist OFF immediately.
- Tip: If mist doesn't start right away after pressing the first timer button, wait 30–60 seconds for the cotton core to re-saturate.

- 2. Lighting (Light button)
- 1st press: Flame-style warm light
- 2nd press: Colorful gradient light
- 3rd press: Lights OFF
- Long press (any time): Turn all lights OFF immediately

Refilling water :

- Turn the mist OFF and unplug power.
- Lift the lid straight up, pour out remaining water from the tank side (not through the air outlet).
- Refill with clean water, add oil if desired, then close the lid and restart.

CLEANING & MAINTENANCE

- Daily : Empty the tank after use; wipe dry with a soft cloth.
- Weekly : Unplug and empty the tank.
- Add a little warm water plus a drop of mild dish soap: swish and wipe.
- Rinse and dry : Do not use benzene, thinner, or corrosive cleaners.

TROUBLESHOOTING

- No mist :
 1. Check water level
 2. Ensure lid is seated
 3. Use a 5V/2A adapter
 4. Wait 30–60 s after refilling.
- Weak mist :
 1. Reduce overfill (leave headroom)
 2. Clean the tank and outlet
 3. Check cotton core.
- Lights not responding :
 1. Ensure you're not in lights-OFF (3rd press) or long-press OFF.
- Water leakage :
 1. Do not overfill
 2. Keep the unit level
 3. Ensure lid is fully inserted.



www.portronics.com

For Support
Visit : www.portronics.com
Email : help@portronics.com
Contact No. : +91 9555245245
Working Hrs. :
Monday - Saturday 10:00am - 6:00pm



E-Waste Management
E: info@3rrecycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste