



Mopcop X

Cordless Vacuum & Air Blower



User Manual

SAFETY PRECAUTIONS


Please follow these guidelines to ensure safe usage:

- Do not use the device with wet hands.
- Keep the product away from water, splashes, or moisture.
- Do not block the air inlet or outlet during use.
- Do not insert any objects into the air inlet or outlet.
- Keep away from heat sources such as stoves or open flames.
- Do not use near flammable substances like petrol, gas, paint thinner, or sprays.
- Avoid dropping or hitting the product.
- Do not pull, twist, or damage the charging cable.
- Stop using the device immediately if it makes unusual noise, smell, or overheats.
- Do not open or disassemble the product. Contact customer support if needed.

PACKAGE CONTENTS

1. Mopcop X × 1N
2. Nozzles × 5N
3. Type-C Charging Cable × 1N
4. User Manual × 1N

PRODUCT OVERVIEW

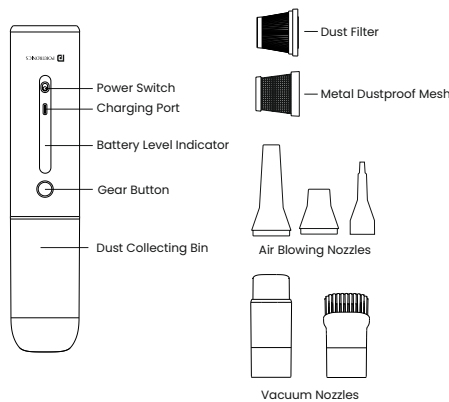

SPECIFICATIONS

- Charging Input : 5V/2A
- Battery Capacity : 3x2000mAh
- Charging Port : Type-C
- Charging Time : 3 hours(approx)

- Motor : Dual Brush less motor
- RPM : 87,000 RPM
- Suction Power : 19,000 PA

INSTALL THE ACCESSORIES


1. Attach the HEPA Filter with Metal Mesh

Insert the metal mesh layer into the HEPA filter properly. Make sure both layers are fixed securely before placing them inside the dust cup.



2. Align the HEPA Filter and Dust Cup

Place the HEPA filter inside the dust cup and align it correctly with the main body. Push it gently until it fits firmly in place.

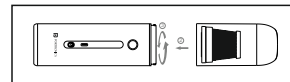


3. Attach the Nozzles

Use the nozzles as per the required function:


Vacuum Mode:

Attach the vacuum nozzle to the front side of the machine to collect dust, crumbs, and small particles.

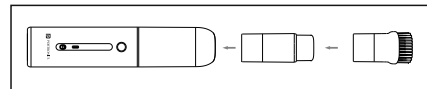

Air Blower Mode:

Attach the air blower nozzle to the back side of the machine to blow air and clean dust from narrow corners or hard-to-reach areas.

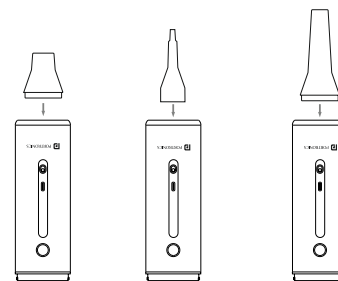

Warning

Do not block the air intake or air outlet while the machine is running, as it may affect performance or damage the device.

B. SWITCH OPERATION INSTRUCTIONS

Button A: Power On

Slide the Power Switch (A) to the ON position before operating the device.


The device will not function unless the Power Switch is turned on

Button B: Speed Control

Press Button B to start the fan speed.

- 1st Press: Starts the first speed level
- 2nd Press: Starts the second speed level
- 3rd Press: Starts the third speed level
- 4th Press: Turns off the device

Make sure Button A is turned on before using Button B for speed control.

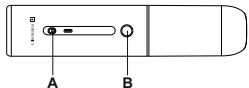

C. RUNTIME, SUCTION & AIR BLOWING PERFORMANCE

1. Fully Charged Runtime

The device provides different runtime levels depending on the selected speed mode:

- 1st Gear: Approximately 55 minutes
- 2nd Gear: Approximately 33 minutes
- 3rd Gear: Approximately 13 minutes

2. Suction Power by Gear

The suction power increases with each speed level for stronger cleaning performance:

- 1st Gear: Approximately 4.2 kPa
- 2nd Gear: Approximately 7.2 kPa
- 3rd Gear: Approximately 19 kPa

3. Air Blowing Speed by Gear

The air blowing speed changes according to the selected gear:

- 1st Gear: 29000 RPM Approximately
- 2nd Gear: 43500 RPM Approximately
- 3rd Gear: 87000 RPM Approximately

BATTERY INDICATOR GUIDE

- Low Battery: The last battery bar flashes continuously.
- Charging: The battery bars illuminate progressively as the charge level increases.
- Fully Charged: All five battery bars remain steadily lit.
- The device cannot be used while charging.

CARE & MAINTENANCE

- Clean the device using a soft, dry cloth only.
- Do not wash with water, alcohol, or chemical cleaners.
- Remove nozzles regularly and clean air inlet/outlet.
- Do not scratch the air vents with sharp objects.
- Avoid overcharging or deep discharging the battery.
- If the nozzle gets blocked, the device may shut off automatically to prevent overheating. Wait 30 seconds, clear the blockage, and restart.
- The battery is recyclable.
- Dispose of the battery only through authorized recycling centers.
- Battery removal should be done by professionals only.

TROUBLESHOOTING

1. Device not turning on?
 - Battery may be low. Please charge fully.
2. No indicator light while charging?
 - Check the power adapter and Type-C cable connection.

CLEANING THE DUST BIN & HEPA FILTER

Step 1:

Remove the HEPA filter assembly from the dust cup and dispose of the collected debris into a trash bin.


Step 2

Separate the HEPA filter cover from HEPA filter.

Clean the HEPA filter cover using a soft brush.

Wash the HEPA and dust collecting bin with water.

Ensure all parts are completely dry before reassembly.

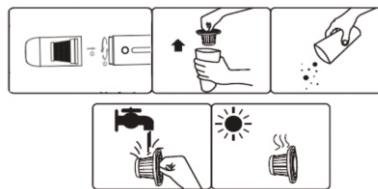

www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

Working Hours : Monday – Saturday,
(10:00am – 6:00pm)



E-Waste Management

E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste