



www.portronics.com

For Support

Visit : www.portronics.com
Email: help@portronics.com
Contact No. : +91 9555245245
(Working Hrs. : Monday – Saturday 10:00am – 6:00pm)



E-Waste Management
E: info@3rrecycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste




NEBULA X

PARTY SPEAKER WITH WIRELESS KARAOKE MIC

USER MANUAL

Functional Brief Description

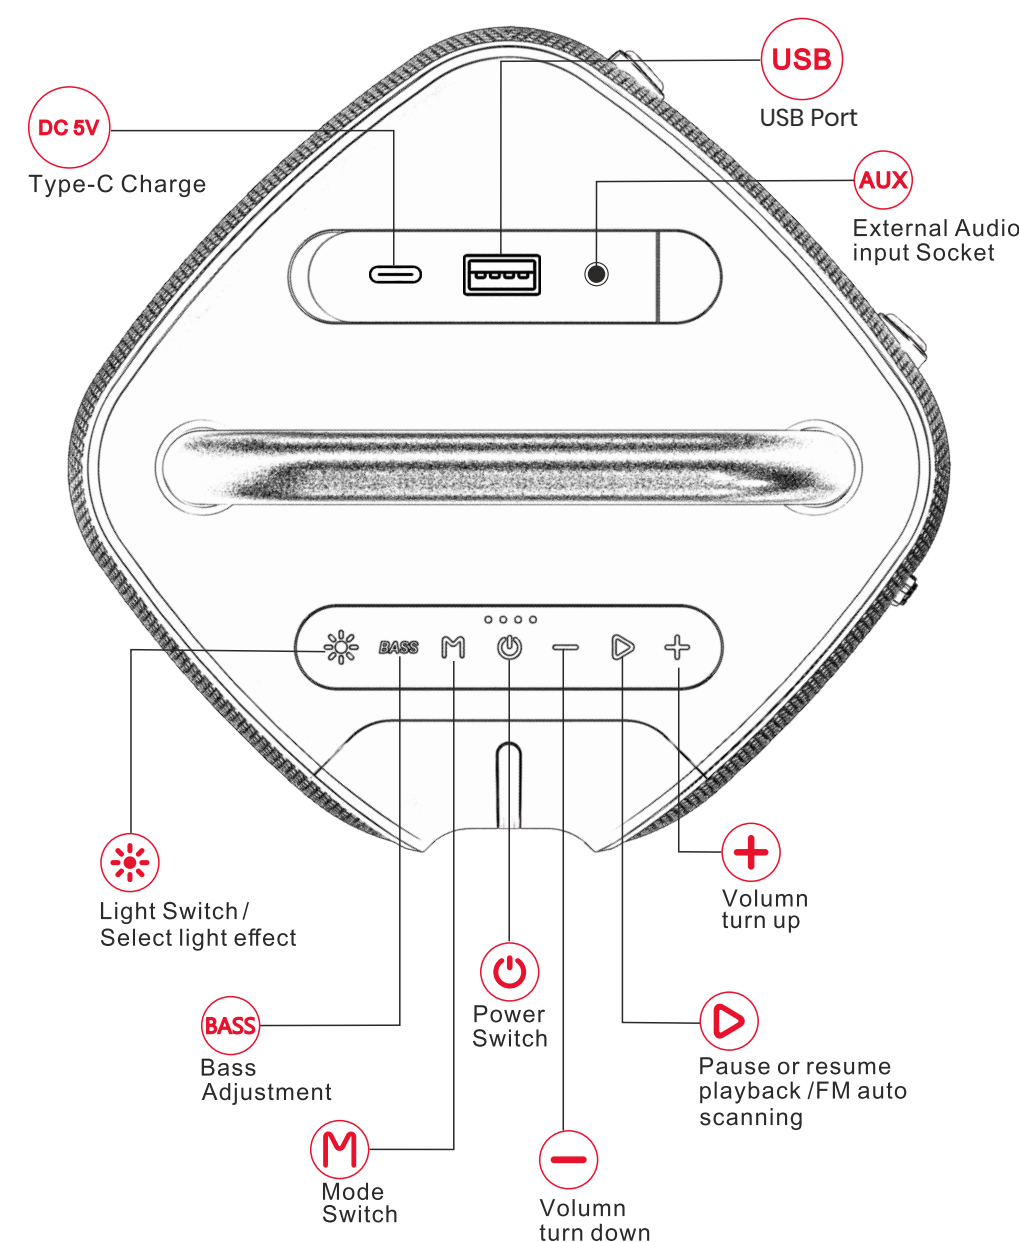

PRODUCT OVERVIEW

Thank you for purchasing Portronics Party Speaker! Designed for powerful audio performance and portability, this speaker is perfect for indoor and outdoor use.

Basic Function

TURN THE POWER ON OR OFF

Hold “**U**” button for more than 2 seconds.

MODE SWITCH

Short press “**M**” button to switch mode “**BT--> USB--> AUX IN**”. The first time booting will enter into Bluetooth model by default, the next booting will enter into the same mode and setting as last selection.

BLUETOOTH CONNECTING

Short press “**M**” button switch to BT mode, there will be a prompt voice; choose Portronics Nebula X on your Bluetooth device to connect. Once successfully connected, there will be a prompt sound, which means that the Bluetooth connection is successful.

-Bluetooth Player: press “**▷**” button to Play/Pause music; long press “**+**” once for next song; long press “**-**” once for last song.

-Bass Adjustment: Press “**BASS**” to increase the bass.

MUSIC MODE (USB)

1. MP3 Player (USB): Plug a USB, the speaker switches to the USB source automatically. Audio playback will start automatically.

When plug a USB, the last plugged device will play in priority.

Press “**▷**” to play/pause music; long press “**+**” once for next song; long press “**-**” once for last song.

AUX MODE

1. Insert the AUX cable, and then press the “**M**” button switch to AUX mode.

2. In Aux mode, press “**▷**” button to MUTE mode, press “**▷**” again to exit MUTE.

VOLUME CONTROL

During playing, press “**+**” or “**-**” to adjust the volume up/down from range U00-U15 (There will be prompt tone when the volume is turned to the minimum and maximum).

RGB LIGHT CONTROL

1. Hold “**✱**” for more than 2 seconds to turn on/off the light.
2. Press “**✱**” to select your preferred light effect.

TWS FUNCTION

Switch both speakers to Bluetooth mode, press and hold “**BASS**” on one speaker for more than 2 seconds to enter TWS mode. After TWS connected successfully, there will be a prompt voice and the indicator lights on the BASS key on both speaker will on. Press and hold “**BASS**” more than 2 seconds to exit TWS mode.

SPEAKER BATTERY RECHARGING

When the speaker’s battery is low, a warning sound will beep. Please connect the speaker to a power source using a Type-C charging cable and an adapter with a minimum output of 5V/3A.