 




NOVA

40W Portable Wireless Speaker

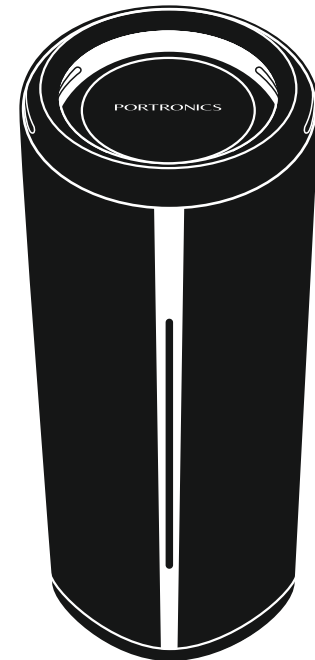

 
User Manual

1 WHAT'S INSIDE


Before using your product, read all accompanying safety information.

Important Safety Instructions

- Keep speaker away from any source of heat.
- Take care when charging the speaker, excessive prolonged charging can damage battery lifetime.
- Charge the speaker to full capacity when using for the first time.
- If does not use this speaker for long time, please charge at least once within one month, in order to prevent the lithium battery from causing and damaging because of excessive consumption.
- Adjust the volume to appropriate level to avoid disturbing others.

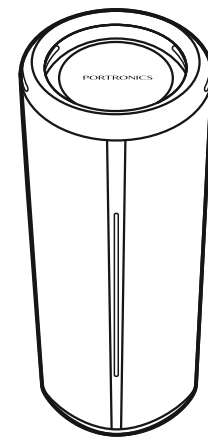

B3

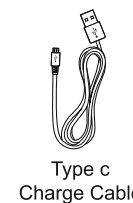 


Type c Charge Cable



User Manual

 2 BUTTON FUNCTIONS

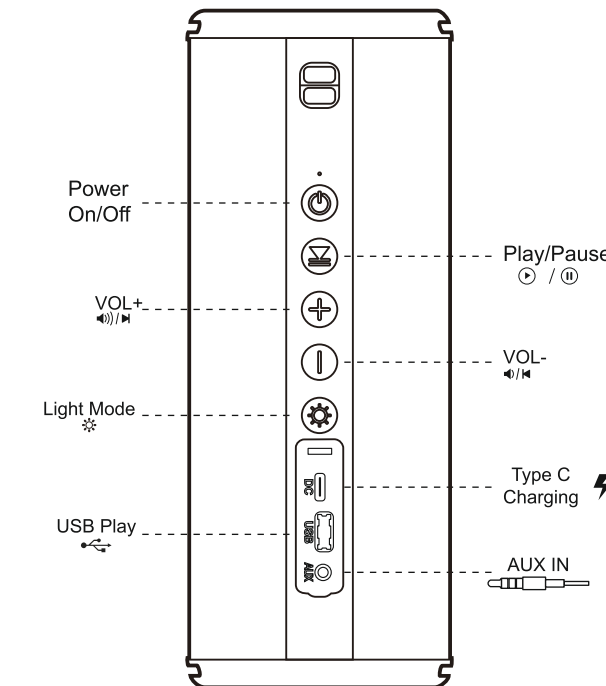

- **Volume Control:** Short press "+" or "-" to increase or decrease volume.
- **Track Navigation:** Long press "+" or "-" to skip to the next or previous track.

- **Play/Pause:** Short press the Play/Pause button.
- **Disconnect Bluetooth:** Long press the Play/Pause button.
- **Switch Modes:** Short press the Power button.

3 BLUETOOTH PAIRING

- Choose Bluetooth mode by short-pressing the Power button.
- Enable Bluetooth on your mobile device and select "Portronics NOVA" from the list of available devices.
- Once pairing is successful, you can start playing music.

 
 


4 CALL FUNCTIONALITY (BLUETOOTH MODE ONLY)

- **Answer a Call:** Press the Play/Pause button once.
- **End a Call:** Press the Play/Pause button during the call.
- **Call Back:** Double-press the Play/Pause button.



5 AUX MODE

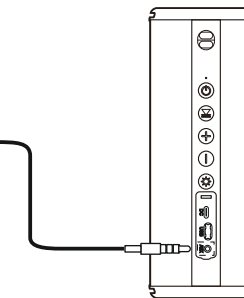


- Connect a 3.5mm audio cable to the speaker. The speaker will automatically switch to Line-In play mode.

6 TWS (TRUE WIRELESS STEREO) MODE

- Power on two Nova speakers.
- Double-click the Power button on both speakers simultaneously to enter TWS pairing mode.

Note: The master speaker will issue a voice prompt once paired successfully.

 
- To disconnect TWS, double-click the Power button on either speaker; a voice prompt will confirm disconnection.
- TWS pairing will automatically reconnect the next time both speakers are powered on.

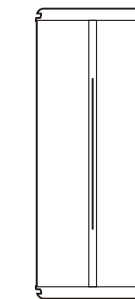

7 CHARGING INSTRUCTIONS

- Use the provided Type-C cable to charge the speaker.
- **Indicator Light:** A flashing white light on the speaker body indicates charging.
- **Charging Time:** Approximately 3 hours.

 Low Battery Warning: The speaker will issue a voice prompt and automatically reduce volume when the battery is low. Recharge promptly using the Type-C cable.

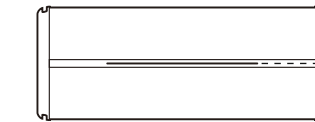

Indicator Light

8 SPECIFICATIONS

- **Output Power:** 40W
- **Battery:** 7.4V, 2500mAh
- **Bluetooth Version:** V5.3
- **Bluetooth Range:** ≥10m (open area)
- **Playtime:** Up to 5 hours (varies by volume level)
- **Charging Input:** DC 5V, 2A (max)
- **Dimensions:** 89 × 89 × 230mm
- **Weight:** 930g
- **Play Modes:** Bluetooth, AUX IN, USB, TWS

9 IMPORTANT SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources.
- Charge the speaker fully before first use.
- Avoid excessive or prolonged charging to preserve battery life.

- If unused for an extended period, recharge the speaker at least once a month to prevent battery degradation.
- Adjust volume to an appropriate level to avoid disturbing others.

Additional Notes

- The speaker will automatically power off after 15 minutes of inactivity.
- When turning off the speaker, plug in the charging cable to observe the flashing white light indicating charging.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday – Saturday 10:00am – 6:00pm)



E-Waste Management
E: info@3recycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste