



USER MANUAL

Must read before using this product, Please read it carefully and keep it properly. This Instruction Manual for Projector

Thank you for purchasing the Portronics Pico 13 projector. For the sake of your safety and interests, please read this product manual carefully before using the product, standardize the operation, and ensure your Personal safety and property safety.

#### ATTENTION

1. When the projector is working, do not block the air inlet or outlet, so as to avoid damage to the internal electronic devices caused by the failure of dissipating heat.
2. To protect your eyes, do not look at the lens of projector directly.
3. To avoid damage of the lens, do not use paper, cloth and other cleaning tools to wipe the lens directly, please use a dust-free cloth or wipe it with industrial alcohol gently.

4. Please ensure that the projector is used in a dry and ventilated environment.
5. Do not store the projector in an overheated or over-cooled place. High / low temperature will shorten the service life of electronic devices. The storage and use environment of the projector is allowed to be 5 ~ 30 °C.
6. Do not put the projector into any heating equipment (such as dryer, microwave oven, etc.) to dry.
7. Do not drop or hit the product from high altitude to avoid damage to the equipment.
8. It is recommended to use the power adapter equipped with the product for power supply.
9. If there is any problem with the product, do not disassemble it without permission. Please contact the brand for assistance.
10. If the contents of the manual are inconsistent with the actual product, the actual product shall prevail.
11. To access the instruction manual for the projector, the system comes with an user manual app.


#### GETTING STARTED

1. Long press the power button of the projector or the power button on the remote control for 3 seconds to power on or off the projector.
2. There are two different states when working with a battery and when working with a power adapter, and the color of the indicator light changes differently.
  - When the projector is working with battery power supply, the power indicator shows that the blue light is always on.
  - When the projector is low on power, indicator light shows a flashing red light.
3. About the indicator light states:
  - During charging, the indicator light turns green and flashes.
  - When fully charged, the indicator light turns green and is continuously on.
4. When working with a power adapter:

If the device does not operate within fifteen minutes, it may automatically enter screen saver mode.


#### How to adjust focus on projector.

Turn the side focusing wheel to adjust the image to a clear one, and then the image is focused.

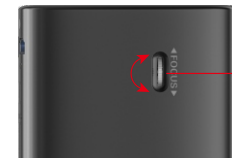

Focusing wheel

#### REMOTE CONTROL KEY DESCRIPTION

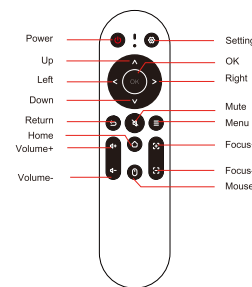


Power  
Up  
Left  
Down  
Return  
Home  
Volume+  
Volume-  
Setting  
OK  
Right  
Mute  
Menu  
Focus+  
Focus-  
Mouse

#### Attention:

 Please aim the remote at the back of the projector. Please pull out of the batteries if you did not use the remote control for a long time.

#### ACCESS USER MANUAL APP

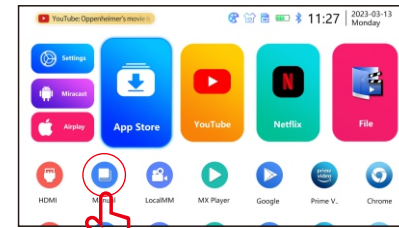

#### PLEASE NOTE

Please read this manual carefully before use and keep it for future reference.

- Avoid exposure of the projector to dust, water / moisture and extreme temperatures.
- This device is not dustproof or waterproof.
- Please use high quality power cord and under specified rated power supply.
- When projector is working, please do not look directly into the lens, the strong light will flash your eyes and cause slight pain. Children should use the projector under the supervision of adults.
- Do not cover the vents of projector and ensure it is in a well-ventilated area when in use, positioned at least 2 feet away from the wall from behind. Heating will reduce the life of projector and cause danger.
- Please switch off the projector and cut off power when not in use. If not to be used for long, please fully charge the projector before keeping it in storage.

- Users or third-party professionals should not attempt to disassemble the projector for testing and maintenance, in which case, the warranty will be void.

- For optimal viewing performance, the projector should be positioned at a height of 5 feet from the ground and at least 5 feet away from the wall or screen in the front.

- Use the remote control from behind the projector for convenient operation.

**Note:** Any damage caused by physical impact, water/ liquid, fire, etc. caused by the customer or nature shall not be covered under warranty.

Only product design, feature and functionality-related faults can be considered. As per the brand's discretion, the product is eligible for repair and not for replacement, during the warranty period.