



POWER BRICK II 20K

20000mAh Power Bank



Thank-you for choosing Portronics. We're happy to help you understand how to use this product. Read on!

User Manual

Package Contents :

1. Power Bank
2. Charging Cable
3. User Manual

Power Brick II 20K

1. Wakeup Button
2. Type C Port
3. USB Port 1
4. USB Port 2
5. Micro USB Port
6. LED Indicator



Charging Your Devices

A button is located on the side of the Mobile Power Bank.

- When the button is pressed once, the LED indicators will illuminate to show how much battery capacity is left.
- When held down, the button turns off the LED indicators and stops any device charging taking place.
- When pressed twice, the button turns the built-in LED flashlight on/off.

When charging a USB device, please refer to the guide below to understand the LED Indications:

Percentage	LED 1	LED 2	LED 3	LED 4
Full	On	On	On	On
99 - 66%	On	On	On	Off
66 - 33%	On	On	Off	Off
33 - 1%	On	Off	Off	Off
0%	Off	Off	Off	Off

To charge your mobile phone with this Powerbank, simply connect to using the charging cable provided.

Charging the Power Bank

Repeat the steps mentioned above to navigate through the powerbank. When charging your Powerbank, please refer to the guide below to understand the LED Indications.

Percentage	LED 1	LED 2	LED 3	LED 4
0 - 33%	Blinking	Off	Off	Off
33 - 66%	On	Blinking	Off	Off
66 - 99%	On	On	Blinking	Off
Full	On	On	On	On
Abnormal	Blinking	Blinking	Blinking	Blinking

To charge your powerbank, connect the Type C port located on the Power Bank to the USB-A port on a computer or USB charger, using the Charging cable provided.



Technical Specifications :

Capacity	: 20000mAh
Input (Micro USB)	: DC 5V/2.1A (max)
Input (Type C)	: DC 5V/2.1A (max)
Total Output (USB 1/USB2)	: DC 5V/2.4A (max)

DOS and DON'Ts

- Make sure the Mobile Power Bank is fully charged prior to use.
- Use a cable suitable for your device when charging it from the Mobile Power Bank.
- When charging the Mobile Power Bank, it is recommended that

you use the included USB Micro cable.

- Under condition of low battery, the LED lights will turn off while charging a device.
- Recharge the Mobile Power Bank as soon as possible to avoid shortening the battery life.
- The battery should be charged at least every three months to avoid shortening the battery life.
- When the Mobile Power Bank enters protection mode (i.e. LEDs turn off and power bank will not charge) caused by issues such as a short circuit, use an external charger to replenish the charge and return it to normal operation. Do not get the Mobile Power Bank wet or immerse it in water.
- Do not wash the Mobile Power Bank with corrosive cleaner.

www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245, 011-42413131

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



For E-waste & ROHS compliance refer to <http://www.portronics.com/ewaste.html>