

材质：80g书写纸
印刷：单黑印刷，风琴折
展开尺寸：527.5*148mm 折后尺寸：105.5*148mm

148mm

105.5mm

140W
HD SOUND

PURE SOUND 110

USER MANUAL

1 ACCESSORIES LIST

2 SOUNDBAR CONTROLS

Control Panel

- **Power Button**
Long press to power on / Hold for 3 seconds to power off.
Short press to switch channels: ARC-OPT-USB-AUX-BT
(Press to switch to Bluetooth channel and enter pairing mode, see led showing "Blue" use mobile phone to searching "Pure Sound 110" to connect device)
- **Long press previous/short press volume down.**
- **Short press to play/pause.**
- **Long press next song / short press volume up.**

3 CONNECT TO TV

- **Power Button**
Short Press To Power On
- **Mute Button**
- **Volume Up**
- **Play / Pause**
- **Previous song**
- **Next song**
- **Volume Down**
- **MODE** Press button to change mode BT/ARC/OPT/AUX/USB
- **BT** Press BT unpaired
- **MUSIC** Press Button for Music Mode
- **MOVIE** Press Button for Movie Mode
- **NEWS** Press Button For News Mode

3 CONNECT TO SUBWOOFER

4 CONNECT TO TV VIA HDMI ARC

5 CONNECT VIA OPTICAL/AUX

- Make sure the TV's port is OPTICAL OUT, connect both sides of the cable to OPTICAL, for both the TV and the soundbar.
- Make sure the optical plug is inserted correctly as it moves in the port. Do not exert too big force down and then the optical plug will be damaged.
- Note: If audio is playing from the internal TV speakers, mute or increase the TV volume.
- In Optical Mode: If there is no sound, try setting the TV audio output to PCM: TV Settings > Home > Settings > Sound > Digital Audio Output > PCM
- Connect the 3.5mm to 3.5mm Audio Cable to your TV's AUDIO OUT port.
- Connect the 3.5mm to 3.5mm Audio Cable to your TV's AUDIO OUT port.
- Note: Please remember to enable the AUDIO cable then TV and Soundbar when you want to switch to other mode.

6 CONNECT TO BLUETOOTH

8 WALL MOUNT INSTALLATION

9 SPECIFICATIONS

Input:	AC 110-240V - 50/60Hz
Sound Output:	140W
Adapter:	24V3A
Soundbar Drivers:	(L2)*R2*TS(Soundbar)*S2(SUBWOOFER)
Frequency Response:	40Hz-18kHz
Standby Power:	< 0.5W
Operating Temperature:	0 °C ~ 40 °C (32 °F ~ 104 °F)
Bluetooth Version:	5.3
Soundbar:	W400*H87*D60 (MM)
Subwoofer:	W120*H110*D140 (MM)
Package:	1.300*H165*W440 (MM)
Net Weight:	3.2kg/7.05lbs
Gross Weight:	4.2kg/9.25lbs

IMPORTANT SAFETY INSTRUCTIONS

- **CAUTION:** To reduce the risk of electric shock, do not open the device, there is no part inside for the user. Refer all servicing to qualified personnel.
- The lightning with the arrow symbol in the triangle is a warning sign alerting the user to dangerous voltage inside the unit.
- The exclamation mark in the triangle is a warning sign alerting the user of important instructions accompanying the product.
- **WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

IMPORTANT

- The use of apparatus in moderate climates.
- The marking plate is located on the bottom of unit.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings are not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water
- Do not place objects filled with liquids, such as vases, on the device

www.portronics.com

For Support
Visit: www.portronics.com
Email: help@portronics.com
Contact No.: +91 9555245245

(Working Hrs.: Monday - Saturday 10:00am - 6:00pm)

E-Waste Management
E-info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste