



# PURE SOUND PRO X2

5.1 Channel Home Theatre With  
Wired Subwoofer



**USER MANUAL**

## What is in the box

Soundbar 1 N, Subwoofer 1 N,  
Satellite Speakers 2 N, Remote Control 1 N,  
Wall Mounting Accessories 1 N, User Manual 1 N

## Specification

Output Power	150W
Soundbar Speaker Size	2"*3
Subwoofer Speaker Size	4.5"*1
Satellite Speaker Size	2"*2
Bluetooth Version	5.3
Frequency Response	40Hz-20kHz
Signal to Noise Ratio	80
Soundbar Size	410*100.5*65mm
Subwoofer Size	182*182*248mm
Satellite Speaker Size	150*104.7*62mm
Satellite Wire Length	5m

# Remote Control

## 1. Power Control

- Press Power to turn ON the soundbar from standby mode.
- Press again to switch the soundbar to standby mode.

## 2. Mute Control

- Press MUTE to silence audio instantly.
- Press again to restore sound.

## 3. Input Selection

- Press INPUT to switch between Bluetooth, HDMI, USB, and AUX modes.

## 4. Playback Controls

- Play/Pause: Works in Bluetooth and USB mode.
- In AUX/HDMI mode, Play acts as Mute/Unmute.
- Previous/Next: Skip tracks in Bluetooth/USB mode.
- Press and hold for rewind/fast forward (USB mode).

## 5. Volume Control

- VOL+ increases volume.
- VOL- decreases volume.
- Long press for faster adjustment.

## 6. Sound Settings

- TRE+/TRE- adjusts treble (high-frequency sound).
- BASS+/BASS- adjusts bass (low-frequency sound).

## 7. EQ Modes

- Press EQ to switch between Music, Movie, News, and 3D modes.
- Press and hold EQ to reset to default (Music mode).

## 8. Reset & Bluetooth Control

- Press and hold Play/Pause to reset volume and sound settings.
- In Bluetooth mode, press and hold to disconnect and clear pairing history.

## Important Notes

- Functions may vary depending on selected mode.
- Track controls work only in Bluetooth and USB modes.
- Point remote directly at the soundbar for best performance.



# Soundbar Buttons

## 1. Power Button

- Power On: Press once to turn on the soundbar when in standby (red indicator).
- Power Off / Standby: Press once to switch to standby mode (red indicator).

## 2. Mode Button

- Press to cycle through input modes: Bluetooth - HDMI - USB - AUX.

## 3. Volume Down (-) Button

- Press once to decrease volume.
- Press and hold to play the previous track (Bluetooth/USB modes).

## 4. Play / Pause Button


- Press once to play/pause audio in Bluetooth/USB mode.
- Press once to mute/unmute in AUX/HDMI mode.
- Press and hold for 2 seconds to disconnect Bluetooth; hold again to reconnect.

## 5. Volume Up (+) Button

- Press once to increase volume.
- Press and hold to play the next track (Bluetooth/USB modes).

## Notes

- Functions may vary depending on selected mode.
- Ensure correct mode is selected for proper operation.
- LED indicators show current mode and status.

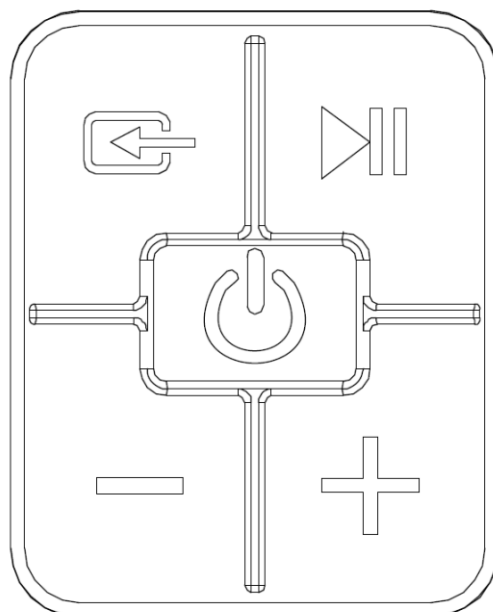



**[www.portronics.com](http://www.portronics.com)**

**For Support**

**Visit :** [www.portronics.com](http://www.portronics.com)

**Email :** [help@portronics.com](mailto:help@portronics.com)

**Contact No. :** +91 9555245245

**(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)**



**E-Waste Management**

**E: [info@3rrecycler.com](mailto:info@3rrecycler.com)**

**For E-Waste & ROHS compliance  
refer to [www.portronics.com/ewaste](http://www.portronics.com/ewaste)**