



RADIANT 2

30W Bluetooth Speaker With Karaoke Mic




Thank you for purchasing the outdoor Wireless speaker Radiant 2 . To ensure correct operation, please read this user manual carefully before operation.

User Manual

Package Contents

Portable Wireless Speaker 1 N
Charging Cable 1 N
User Manual 1 N
Karaoke Mic 1 N

Slot & Keys

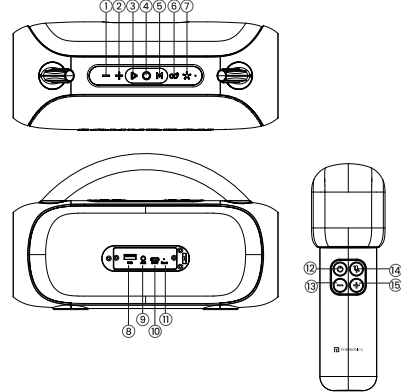

1. Volume Down
2. Volume Up
3. Play/Pause
4. Power On/Off
5. Mode Button (turn among bluetooth USB disk and AUX-IN
6. TWS Button
7. RGB Light
8. USB Port
9. AUX Port
10. Type-C Charging Jack
11. Reset Jack
12. Power Button
13. Volume Down
14. Mute
15. Volume Up

Power On/Off

Long-press the Power button to turn the speaker on and off.

Bluetooth :

- Powering On the Device: Locate the power button on the speaker and switch it to the "ON" position. Upon activation, the speaker will enter Bluetooth mode automatically.
- Connecting via Bluetooth: Activate the Bluetooth feature on your mobile phone. Access the device's Bluetooth

settings and search for the specific device named "Radiant 2" Select the "Radiant 2" device from the available options to initiate the connection. Enjoying Music Playback: Once the connection is established, play music from your mobile device..

- Long-press + or - button to select songs.
- Short-press + or - button to adjust volume up and down.
- Short-press Play/Pause button to play/pause the music.
- Long-press TWS button to disconnect the Bluetooth connection with the mobile device.

TWS Function :

- Turning On and Pairing Speakers: Ensure that both speakers are turned on and set to Bluetooth (BT) mode. Only one of the two units needs to be configured. Short-press the TWS (True Wireless Stereo) button to initiate the pairing process. The TWS button will remain illuminated once the pairing is successful.
- Establishing Bluetooth Connection: Activate the Bluetooth feature on your mobile phone. Search for available Bluetooth devices and select the paired speakers from the list. Playing Music on Both Paired Speakers: Once the Bluetooth connection is established, play your music on your mobile phone. Both paired speakers will now play the audio in sync.

- Exiting TWS Function: If you wish to separate the speakers or use them individually, short-press the "TWS" button again to exit the TWS function.

AUX-In :

- Connecting via Audio Cable: If you're using a music device that's compatible but not Bluetooth-enabled, you can connect it to this device using an audio cable (not included). Connect the device's "Line Out" port to the "Aux In" port on this device.
- Auto-Switch to AUX Mode: Regardless of the current playing mode, upon connecting the audio cable (not provided), this device will automatically switch to the AUX (Auxiliary) mode.
- Controlling Functions via External Device: When an external device is connected, you can control all the functions, including volume adjustments, playback, and other controls, directly from the external device.

RGB Light

The RGB light is on when speaker powered on. User can short-press RGB light button to turn on/off the Light.

Playing music from USB disk :

- Powering On the Speaker: Rotate the Power button to the "ON" position to activate the speaker.
- Playing Music from USB Flash Drive: Insert the USB flash drive into the designated slot on the speaker. The speaker will automatically start playing the music stored on the USB flash drive.
- Navigating and Controlling Playback: Long-press the "+" or "-" button to select specific songs from the USB flash drive. Use short-presses on these buttons to adjust the volume levels up or down. Press the Play/Pause button to start or pause the music playback.
- Note: Whenever a USB flash drive is inserted into the speaker, regardless of the current playing mode, the speaker will switch to play the content stored on the USB drive.
- Ensure that the USB flash drive contains compatible music files for seamless playback on the speaker. Varying file formats and storage capacities may affect playback compatibility.

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Long-press Play/Pause button to activate voice assistant.

Hands-free Call :

- Switching to Phone Conversation: During an active call, a long-press of the Play/Pause button allows the user to switch the call audio from the speaker to the mobile phone.
- Ending the Call: To end the call, either short-press the Play/Pause button on the speaker or utilize the call-ending options available on the mobile phone.

Reset Functionality :

If the speaker does not turn off or respond, user can short-press the Reset Jack with a small round pin to reset the speaker.

More Remarks :

- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

How To Charge :

- Charger Not Included: Please note that the charger is not provided with this speaker. To charge this speaker, use a rated 5V/2A charger.
- Charging Duration: The approximate charging time for the speaker is 3 hours. Once fully charged:
- If the speaker is powered on, the four LED lights will remain steadily lit.
- If the speaker is not powered on, the LED lights will be off.
- Low Battery Warning: When the battery voltage is low, the speaker will provide a prompt indicating the need for recharging.
- Prohibited Functions: This unit does not possess the capability to function as a power bank. It is strictly forbidden to charge other devices via this speaker or to connect other devices using the USB port.
- Please adhere to these instructions for safe and optimal use of the speaker. Ensure the use of a compatible 5V/2A rated charger for efficient charging and prevent charging other devices with this speaker, as it doesn't support power bank functionality.

How to Connect Mic :

1. To Turn On the Device
Press and hold the power button, it will Pair automatically with Speaker & Blue Light will stabilize
2. Adjust Volume
Use the "+" and "-" buttons to adjust the volume of the microphone.
3. Mute Function
Press the mute button to temporarily silence the microphone. When Microphone is Mute Red LED will Glow.
Press again to resume

Warning :

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorization.
- When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.

- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fire.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245, 011-42413131
(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3recycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste