


Use a matching stylus to write on the screen with moderate strength One-click elimination of the overwritten part by pressing the button

Instructions:

- 1. To clear the content on the pad, press the 'Clear' button on the bottom of the pad. Make sure the 'Erase lock' is switched off.
- 2. Switch on the Erase Lock button, to prevent your content from accidentally getting deleted.
- 3. The batteries included are non-rechargeable. The Pad only supports 3V DC Button batteries.
- 4. Kindly remove exhausted batteries from the device on time.
- 5. Follow the below illustrated sequence to remove or insert the battery:

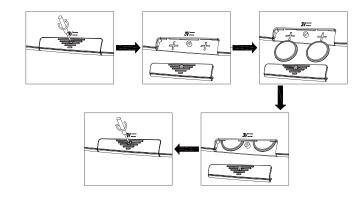

Replace the battery: Pull out the battery tray - remove the battery - replace the CR2016 [3V] button battery push the battery tray into the slot

Attention

To enjoy a better writing experience and prevent the screen from scratches, please use the Stylus provided.









NOTE: Any damage caused by physical impact, Water/liquid, fire etc caused by customer or nature shall not be covered under warranty. Only product design, feature and functionality related faults will be considered.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- 1. Water and Moisture The unit should not be used near water. For example: near a $bathtub,\,washbowl,\,kitchen\,sink,\,laundry\,tub,\,swimming\,pool\,or\,in\,a\,wet\,basement.$
- 2. Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- 3. Heat The unit should be situated away from heat sources such as radiators, heat $registers, stoves\ or\ other\ appliances\ (including\ amplifiers)\ that\ produce\ heat.$
- 4. Power Sources The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 5. Power-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into
- 6. Cleaning The unit should be cleaned only using a warm damp cloth. Do not use
- 7. Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- 8. Attachments Do not use attachments not recommended by the product
- 9. Overloading Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

PORTRONICS

www.portronics.com
For Support
Visit: www.portronics.com
Email: help@portronics.com
Contact No.: +91 9555245245, 011-42413131
(Working Hrs.: Monday - Saturday 10:00am - 6:00pm)

E-waste Management Email - info@3rrecycler.com

For E-waste & ROHS compliance refer to http://www.portronics.com/ewaste.html