



SPATIAL ARC

200W Bluetooth Home Theatre With Spatial Audio Soundbar



USER MANUAL

SOUNDBAR BUTTON FUNCTIONS

LED Display

- When the soundbar is connected to power, the LED display will light up.
- Short press the Power button on the soundbar or remote to turn it ON.
- The display shows the current input mode such as BT, OPT, HDMI, USB, or AUX.

Button Functions

Mode Button []

- Short press to switch between input modes: Bluetooth (BT), Optical (OPT), HDMI, USB, AUX.

Play / Pause Button []

- In BT Mode:
 - Short press to Play or Pause music.
 - Long press to Disconnect or Reconnect Bluetooth.

- In OPT / HDMI / AUX Mode:
 - Short press to Mute or Unmute audio.

Power Button []

- Short press to turn the soundbar ON or switch to Standby mode.

Volume / Track Buttons (- / +)

- In BT / USB Mode:

- Short press to play Previous or Next track.
- Long press to decrease or increase volume.
- In OPT / HDMI / AUX Mode:
 - Short press to decrease or increase volume.
 - Long press for fast volume decrease or increase.

Notes

- Button behavior may vary depending on the selected input mode
- Ensure the soundbar is set to the correct input source for proper operation

REMOTE CONTROL

- 1. Power Button:** Short press to power on/standby
- 2. MUTE:** In all modes, short press to mute/unmute

- 3. PAIR:** After connected in BT mode, long press to disconnect, long press to reconnect. Not available in other modes
- 4. INPUT:** Short press to shift different mode from BT OPT HDMI USB AUX
- 5. RESET:**

Short Press

- AUX / OPT / HDMI modes: Mute or unmute the audio
- BT / USB modes: Play or pause media

Long Press (All Modes)

- Resets the master volume
- Restores treble, bass, and surround sound settings to default



Note:

In BT mode, a long press will disconnect the device and clear the Bluetooth pairing history, even if the device is currently connected

6. In BT mode, a long press will disconnect the device and clear the Bluetooth pairing history, even if the device is currently connected

7. In USB/BT mode, short press to skip to the previous/next song. In USB mode, long press for fast forward/rewind

8. In all modes, short press to increase/decrease the master volume; long press to fast increase/decrease the master volume

9. **MUSIC mode, NEWS mode, MOVIE mode, NIGHT mode:** For these modes, all is short press to shift

10. **TREB+/-:** Increase/decrease Treble

11. **BASS+/-:** Increase/decrease Bass

SPECIFICATION

| | |
|-------------------------|------------------|
| Output Power | : 200W |
| Soundbar Speaker Size | : 2"*4 |
| Subwoofer Speaker Size | : 6.5"*1 |
| Bluetooth Version | : 5.3 |
| Frequency Response | : 35Hz-20kHz |
| Signal to Noise Ratio | : 75 |
| Soundbar Size | : 850*65*104.7mm |
| Subwoofer Size | : 372*190*305mm |
| Bluetooth working Range | : Upto 10m |



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management

E-info@3recycler.com

For E-Waste & ROHS compliance

refer to www.portronics.com/ewaste