

ToadPlay

Mini Wireless Mouse



User Manual

2. When the mouse is in pairing mode (follow Bluetooth) on the computer, select" Toadplay Mouse" from the list of devices. After a few seconds, the mouse is ready to be used.

Method 2:

1.Open "My Computer >>Control Panel2.Open "Hardware and Sound" further >>"Devices and Printers"

3.After clicking "add device", wait for some time & select the option named "Toadplay Mouse" device, click "next" and wait for a few seconds, the mouse can be used normally after the process is completed.

- Note: Most of the Windows 7 systems do not support Bluetooth mode.
- \bullet The mouse can only be used in 2.4G wireless receiver mode on those systems.

Pairing with Apple device via Bluetooth

Settings>Accessibility>TouchAssistive>Touch> Device>Bluetooth Device>ToadPlay.

Package Contents

- 1 x Wireless Mouse
- 1 x USB Receiver
- 1 x Type C Charging Cable
- 1 x User Manual

Features

- 2.4G wireless mouse + Bluetooth mouse + Rechargeable mouse
- 2400 DPI Max
- Rechargeable, Environmental & Energy Saving
- Smart Power-Saving
- Support Windows /8/10/11/Mac (over IOS 13)

How to switch DPI

The DPI of the mouse is 1000/1600/2400(default). You can switch the DPI by pressing and holding the right and middle keys for 3 seconds until the

corresponding LED indicator light flashes. It flashes once to switch to 1000 DPI. It flashes twice to switch to 1600 DPI, It flashes 3 times to switch to 2400 DPI

Connecting Via 2.4 Ghz

Switch from OFF position to "2.4G", which will be indicated as LED flashes green colour for 1 second.

Connection

The wireless mouse comes with dual connectivity modes. Read the following for more info:

2.4 GHz with USB Nano Dongle-

- 1. .Just plug the USB nano dongle into your Laptop/PC.
- 2. Tap the mouse button to use.
- 3. If the connection is unsuccessful, it might be due to the mouse entering protection mode and it shuts automatically. Please charge the mouse for 2–3 hours and follow the previous steps.

Connecting Via Bluetooth 5.0

- 1. Switch from OFF position to "BT" (first connection, Bluetooth will be automatically broadcast)
- 2. Long Press left & right button for 2–3 seconds until the LED indicator flickers with blue light continuously.
- 3. The mouse is in pairing mode. In Bluetooth search find "ToadPlay Mouse" and connect to start using.

These are the ways to connect to PC/Laptop via bluetooth:

Method 1:

Find the § logo on the taskbar if the § icon is not present on the taskbar, please check the second method.

1. 10 icon on the bottom right corner of your computer, press the right key, and click "Add a Bluetooth device"

Reset method for USB receiver:

- 1. Please make sure the rechargeable mouse has enough power. If not, please charge it for 2-3 hours in time.
- 2. Slide the switch to the "2.4G" position
- 3. Press left+ middle+right key together until green LED flashes, then stop to press key
- 4. Plug Receiver, Paired

If the pairing fails within 20S, the mouse exits the pairing mode and the LED goes out

Kindly reminder

The receiver and the mouse are one-to-one matched. USB receiver are paired well when leaving the factory, plug and play, without the need for further pairing.

It is recommended that you do not use the reset method as it may mislead consumers.

Reset is only needed when the receivers are mixed together.

Charging the mouse

This wireless mouse is rechargeable with its Type-C port. Please use the charging cable (provided in box) connect to the computer or power bank to charge the mouse.

Attention

- 1) Press any button to activate the mouse when the mouse enters into sleeping the mode automatically after long rest
- 2) Avoid using the mouse on a mirror, glass or any reflecting surface
- 3) Protect from fire and puncture, do not expose to wet and damp environment.
- 4) Keep away from high temperature areas.

Troubleshooting

If the mouse does not work, try the following:

1. Insufficient battery will cause the Bluetooth connection to fail or the mouse pointer to not respond. Please charging it first. It can work simultaneously while charging.

Check that the receiver is plugged in to the PC's USB port. If it is, try connecting to a different good USB port.

NOTE: Any damage caused by physical impact, Water/liquid, fire etc caused by customer or nature shall not be covered under warranty. Only product design, feature and functionality related faults will be considered.

This mouse will come under non-repairable category.





E-Waste Management E: info@3rrecycler.com For E-Waste & ROHS compliance refer to www.portronics.com/ewaste

www.portronics.com

For Support

Visit: www.portronics.com

E-mail: help@portronics.com

Contact No.: +91 9555245245 (Working Hours: Monday - Saturday, 10:00am - 6:00pm)