

TOAD 9

Wireless Optical Mouse




User Manual

I. Package Contents


- 1x Wireless Mouse
- 1x Charging Cable
- 1x USB Receiver
- 1x User Manual

II. Physical Description

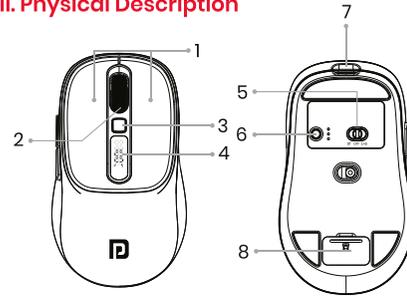

- 1- Left & Right Buttons
- 2- Clickable Scroll Wheel
- 3- Adjust DPI Button
- 4- LED display
- 5- Power Mode Switch
- 6- Bluetooth Mode Button
- 7- Type-c charging Port
- 8- USB Receiver & Slot

III. Powering On

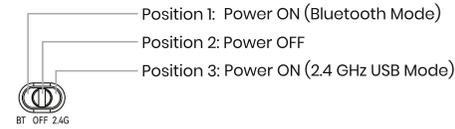

IV. Charging

- Connect the provided USB to Type-c charging cable to the mouse and a wall charger.
- When charging, the LED screen displays "CH", and when fully charged, it will show 100%.
- Charging time is approximately 3 hours.
- Please use only a USB to Type-C cable to charge the mouse.

V. Operation Modes


You can use the Toad 9 wireless mouse in bluetooth and 2.4 GHz(USB Receiver) modes.

I. Bluetooth Mode

With the bluetooth mode, you can pair this Portronics wireless mouse with laptops, smartphones and tablets, following the below steps:

- Step 1:** Ensure the mouse is powered on in Bluetooth mode (Power Switch in Position 1).
- Step 2:** Press and hold the Bluetooth Mode button for 2 seconds. The LED light will flash, indicating pairing mode.
- Step 3:** Activate Bluetooth on your device (laptop, smartphone, or tablet).
- Step 4:** Search for Bluetooth devices and select and connect with Toad 9 or Toad 9 Plus in the list.
- Step 5:** Once paired, the LED light will turn on steadily.

II. 2.4 GHz USB Receiver Mode

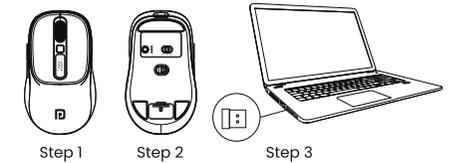

- **Step 1:** Ensure the mouse is powered on in 2.4 GHz mode (Power Switch in Position 3).
- **Step 2:** Insert the USB receiver into a USB port on your computer.
- **Step 3:** The mouse will automatically connect to the USB receiver.

VI. Multi-Device Pairing

- You can pair up to three devices with your Toad 9 mouse: one via 2.4 GHz and two via Bluetooth.
- **To pair a second Bluetooth device:**
 - Ensure the first Bluetooth device is paired.
 - Press and hold the Bluetooth Mode button for 2 seconds to enter pairing mode.
 - Follow the pairing steps for the second device.
- **To switch between paired devices:**
 - Press the Bluetooth Mode button to switch between paired Bluetooth devices.
 - Switch the Power/Mode switch to Position 3(2.4 GHz) to use the 2.4 GHz connection.



VI. Care & Maintenance

1. Turn off the mouse before cleaning.
2. Use a soft, damp cloth to clean the mouse surface.
3. Avoid using chemicals, solvents, or abrasive cleaners.
4. Prevent liquids from entering any openings.

VII. Troubleshooting

- **Mouse not connecting:**
 - Check if the batteries are fully charged.
 - Ensure the USB receiver is securely plugged in.
 - Try restarting your computer.
 - If using Bluetooth, check if the mouse is paired correctly and within range.
- **Cursor movement is slow or erratic:**
 - Clean the mouse sensor with a soft cloth.
 - Try using the mouse on a different surface.
 - Adjust the DPI settings.
- **Mouse buttons not working:**
 - Check if the mouse is turned on.
 - Ensure there are no obstructions between the buttons and the mouse surface.
- **Battery life is short:**
 - Ensure the mouse is fully charged.
 - Avoid extreme temperatures.

VIII. Product Specifications


Wireless Technology	Bluetooth & 2.4 GHz
Power Source	Rechargeable
Charging Port	Type-C
Charging Time	3 hours
Optical Sensitivity	Adjustable DPI
DPI Levels	1200-1600-2400-3200-4800
Compatible Operating System	Windows 8 & above, macOS12, Android 9.0, iOS 12 & higher

Tip: When you press the DPI button, the LED screen will show the actual DPI.

Warranty Information

This product is covered by a limited warranty mentioned on the packaging from the date of original purchase. This product is not eligible for repair and the brand reserves the right to replace the product at their discretion, during the warranty period. The customer is required to retain the original purchase receipt as proof of purchase. This warranty covers functionality-related faults and manufacturing defects. It does not cover damage caused by accidents, misuse, abuse, neglect, water, other liquids, fire, or extreme temperatures, normal wear and tear, unauthorized repairs or modifications.

Reset method

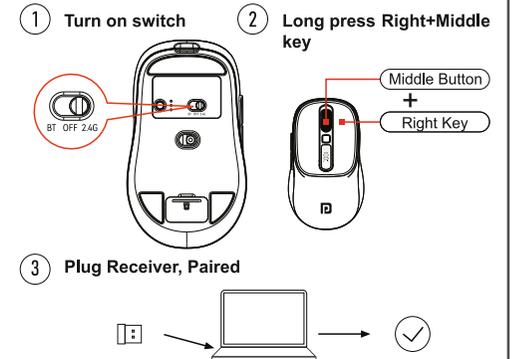

Tips: Long press Right+Middle Key, plug receiver, paired