



INTRODUCTION

The Portronics Toad Ergo 3 is a wireless mouse with 2.4 GHz wireless technology (USB receiver), dual bluetooth connection, 6-button control, an adjustable DPI feature. The ergonomic vertical design reduces tension on the palm and wrist during long hours of work and gaming.

PACKAGE CONTENTS

- 1 x Wireless Mouse
- 1 x USB Receiver
- 1x Charging Cable
- 1x User Documentation

DUAL MODE RECHARGEABLE MOUSE

Bluetooth Compatibility:

 Operating system requirements: Windows 8, Windows 10, Android 5.0 and above, iOS13 and above, mac OS X 10.10 and above • Hardware configuration requirements: Bluetooth 5.0 and above.

2.4G compatibility:

- Operating system requirements: Windows 8, Windows 10 and above, Windows, Android and above, iOS13 and above, Mac OS X 10.5 and above.
- Hardware configuration requirements: available USB port.

2.4G WIRELESS RECEIVER MODE

Toggle the switch to the 2.4GHz mode. The green indicator is blinking.

- Plug the mouse receiver into the computer and tap the mouse button to use the mouse.
- If the connection is successful, the red LED light at the bottom of the mouse will light up.

If it does not light up, it means that the mouse battery enters the protection mode and shuts down automatically. Please charge the mouse for about 2–3 hours, and then continue with the previous step.

BLUETOOTH MODE

- Turn the toggle switch to "on", short press the pairing key to switch to "BTI or BT2" mode, the Bluetooth indicator light flashes blue, and long press the pairing key for 23S to force Bluetooth pairing.
- At this time, the Mouse enters the pairing state, search (Ergo 3-BTI or Ergo 3-BT2) and click pairing to connect and use.

Note: BTI and BT2 cannot be connected at the same time, you need to switch between them.

There are 2 ways to connect mouse and computer.

- The first method: Find the "Bluetooth logo" if no "Bluetooth logo", please check in the bottom right corner of your computer, press right key, press "Adding a Bluetooth device" When "Bluetooth mouse pairing is ready "appears on the computer, select a "Bluetooth mouse device" and click pairing. After a few seconds, you can use the mouse normally.
- The Second method: Open "My Computer" and open the "Control Panel" Open "Hardware and Sound", then open "Devices and Printers" After clicking to add "device", wait for more than ten seconds, select the "Toad Ergo 3" device, click "next" and wait for a few seconds, the mouse can be used normally after the progress is completed.

NOTE: Most of the Window 7 does not support the Bluetooth mode and can only use 2.4G wireless receiver mode.

Apple phone in Bluetooth mode: Settings-Accessibility-Touch-Assistive Touch-Device-Bluetooth Device-Bluetooth Mouse-Enter PIN (Input 0000 If PIN Requested).

NOTE : Only Apple phones with iOS 13 above can connect to Bluetooth.

MODE SWITCHING METHOD

- Toggle the switch to ON.
- Short press the pairing key to switch between 2.4G / BTI / BT2.
- Long press the pairing key (23s) to activate the re-pairing mode.

CHARGING THE MOUSE

This product is a rechargeable mouse. Charge the device using the USB Cable provided inside the box.

DPI BUTTON

- The DPI button allows adjustment of pointer speed.
- Press the DPI button below the scroll wheel to cycle through three sensitivity settings: 1000 / 1600 / 2400 DPI (default: 2400 DPI).

ADDITIONAL INFORMATION

- Auto-sleep/power-saving function, unit will enter auto-sleep mode during prolonged inactivity, press any key or scroll wheel to re-activate unit.
- Optical mouse may not work smoothly on some surfaces such as smooth or reflective surfaces.

TROUBLESHOOTING

If the mouse does not work try the following:

- Check if the mouse is low in battery, and if so, charge it first. Working can be done simultaneously while charging.
- Check that the receiver is plugged in to the PC's USB port. If it is, try connecting to a different USB port.

If the mouse is slow or unresponsive:

 Increase the distance between the mouse and any other wireless devices Certain metal surfaces may interfere with the transmission between the mouse and the receiver which can delay the response time.

WARNING

Read all instructions and warnings prior to using this product.

- Keep dry at all times.
- Do not attempt to insert foreign objects into device
- Do not disassemble or attempt to repair the device

NOTE

Any damage caused by physical impact, Water/liquid, fire etc caused by customer or nature shall not be covered under warranty. Only product design feature and functionality related faults will be considered This mouse will come under non-repairable category



www.portronics.com

For Support
Visit: www.portronics.com
Email: help@portronics.com
Contact No.:+91 9555245245
(Working Hours: Monday - Saturday 10.00am - 6.00pm)



E-Waste Management E: info@3rrecycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste



TOAD ERGO 3

Rechargeable Ergonomic

Wireless Mouse



USER MANUAL