 


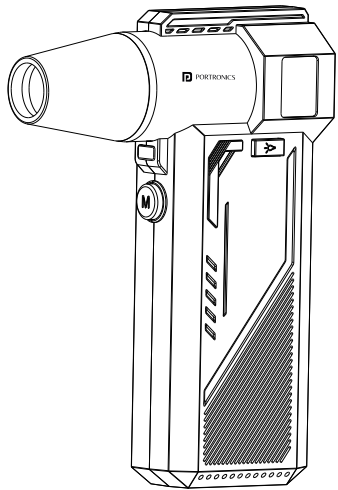

TORNADO PRO

Handheld High-Speed Air Duster

User Manual

Noise Level: ≤80 dB(A)
Battery Type: Lithium Battery (2x3000mAh)
Charging Voltage/Current: DC 5V / 2A
Rated Power: Max 150W
Charging Time: Approx. 3 hours
Usage Time:
-Low: Up to 60 minutes
-Medium: Up to 25 minutes
-High: Up to 15 minutes

INDICATOR LIGHTS

Solid (constant):Device is working / Charging complete
Flashing: Low battery / About to shut down
Slow blinking: Device is charging

CHARGING INSTRUCTIONS

 
- Connect the USB-A end of the cable to a 5V/2A power adapter.
- Plug the Type-C end into the device's charging port.
- Charging takes approximately 3 hours.
- A light indicator will signal when fully charged

SAFETY PRECAUTIONS

To avoid the risk of fire, property damage, or personal injury, please observe the following safety precautions when using this product:

- Do not use this product with wet hands.
- Do not place this product in environments with splashing water or immerse it in water.
- Do not block the air outlet or air inlet while the product is in use.
- Do not insert foreign objects into the air outlet or air inlet.
- Do not place this product near heat sources such as stoves.
- Do not use this product near gas stations, petroleum gas, or other flammable products such as paint thinner, volatile agents, or sprays, as it may cause an explosion or fire.
- Do not drop or collide with the product, as this may cause damage and abnormal operation.
- Do not forcefully pull, twist, squeeze, or modify the charging cable. If the charging cable is abnormally heated or damaged, stop using it immediately.
- If the product makes abnormal noise, produces an odor, becomes too hot, or if the fan blades do not rotate normally, stop using it immediately.
- Do not disassemble the product. Accidental disassembly may cause abnormal operation.

INSTALL THE AIR NOZZLE

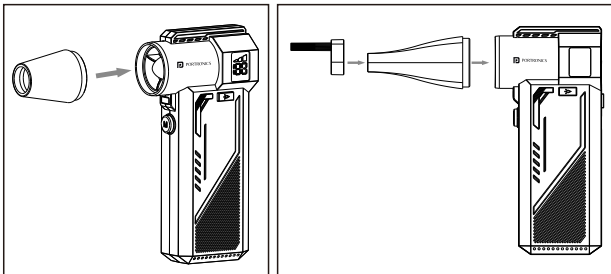

1. Install the Air Nozzle

Align the air nozzle (or brush attachment) with the slot on the device. Insert it firmly in the direction shown in the illustration.

2. Power On/Off

Press the Power Button (A) to turn on the display.
Press the Power Button (A) again to shut down.


3. Adjust the Air Speed

After pressing Button (A), press the Mode Button (B) to turn it on & switch between different speed levels (gears).


4. Turn On the LED Light

Press the LED Light Button (C) to switch the light on or off.

PACKAGE LIST

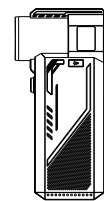


Tornado Pro

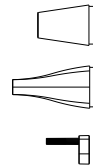

3x Nozzles





Charging Cable

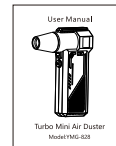

User Manual

PRODUCT SPECIFICATIONS

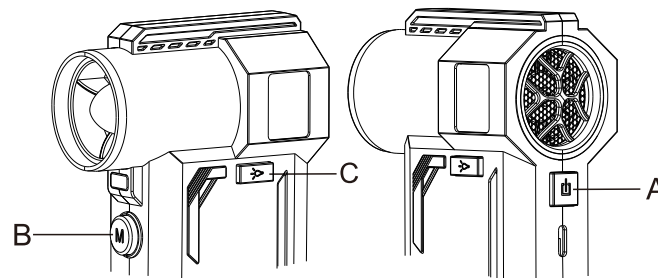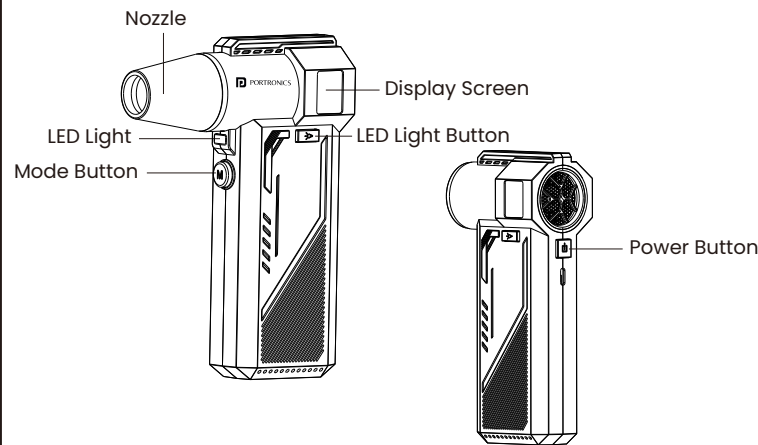

To avoid damage to the machine, do not block the air intake or outlet while the machine is running.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Not turning on	Battery not charged	Charge the unit fully
Weak airflow	Low battery or nozzle blockage	Recharge or clean nozzle
Short operation time	Running on high speed	Use lower speed for extended use



www.portronics.com
For Support
Visit : www.portronics.com
Email: help@portronics.com
Contact No. : +91 9555245245
(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3recycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste