



## PURE SOUND 104

100W Bluetooth Soundbar with Wired Subwoofer

 
USER MANUAL

### Package Contents

- |                        |                    |
|------------------------|--------------------|
| 1. Soundbar 1IN        | 4. User Manual 1IN |
| 2. Wired Subwoofer 1IN | 5. Audio Cable 1IN |
| 3. Remote Control 1IN  | 6. Stand 2IN       |


### Remote Control

- Standby** : Press this button to turn on/off the subwoofer
- Mode** : Input button (AUX/USB/BT/SD)
- 0-9** : To choose 0-9 numerical play
- Repeat** : Repeat one and all audio play
- Volume +** : Increase the volume
- Prev** : to select the song in USB/SD card and to select previous channel in radio station
- Volume -** : Reduce the volume
- Mute** : To mute the sound
- Next** : To select the song in USB/SD card and to select next channel in radio station
- Play/Pause** : To play/pause in USB/Memory card, Long press (Play/Pause) fro 3 seconds to search and save channels automatically in radio station, 20 channels can be saved up a most.

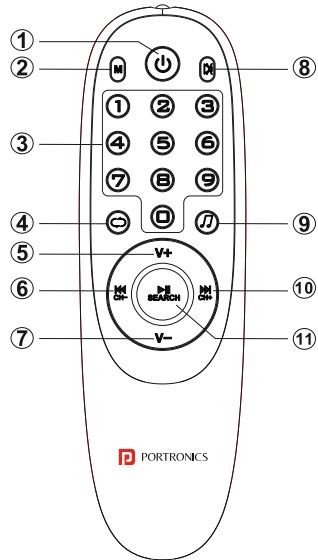


**BT Connection** : Please adjust item into BT mode by pressing the INPUT key on remote control, then search for item model name on mobile phone, then pair mobile phone and item, then BT connected

 **Note** : FM- The FM/Radio playback feature of the soundbar depends on multiple factors location, frequency, weather, etc.

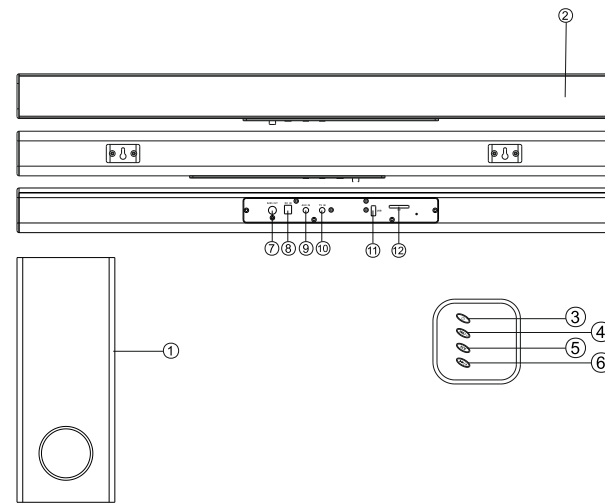


- |                                 |                   |
|---------------------------------|-------------------|
| (1) Subwoofer                   | (7) Bass out      |
| (2) Remote Sensor               | (8) DC IN         |
| (3) POWER- Use to switch ON/OFF | (9) AUX IN        |
| (4) VOL-/Last Music             | (10) TV IN        |
| (5) MODE/Play/Pause             | (11) USB Input    |
| (6) VOL +/Next Music            | (12) SD Card Slot |

 

CONNECT THE POWER CABLE TO THE MAINS



 TURN ON THE POWER SWITCH

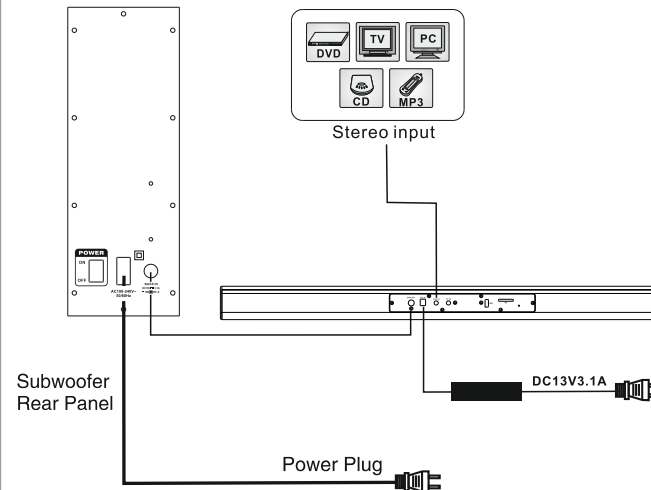

### SPEAKERS

|                 | SOUND BAR  | SUBWOOFER  |
|-----------------|------------|------------|
| Driver Size     | 2inch x 4  | 5inch      |
| Impedance       | 3Ω         | 4Ω         |
| Frequency Range | 40Hz-20KHz | 20Hz-150Hz |

### AMPLIFIERS

|                       |                        |
|-----------------------|------------------------|
| Channel Separation    | 45db                   |
| Signal to Noise Ratio | 75db                   |
| Power Requirements    |                        |
| Voltage               | 100-240V~(DC 13V 3.1A) |
| Frequency             | 50/60Hz                |

### Do's and Don'ts

To ensure safe operation of your soundbar, please follow these rules:

- Always place the Soundbar in a safe location. When mounting to a wall, carefully screw it in to avoid damage later.
- Avoid excessive pressure on either equipment.
- When not in use, switch off the Soundbar & Subwoofer and unplug them from the power source
- If the product is defective, kindly do not attempt to fix it yourself. We recommend professional help.
- Keep the product away from water, to avoid internal damage.

**NOTE**: Any damage caused by physical impact, water/liquid, fire, etc. caused by the customer or nature shall not be covered under warranty. Only product design, feature and functionality related faults will be considered. Never dismantle the product without due permission, otherwise it may nullify the warranty clause.

**www.portronics.com**

**For Support**

Visit : [www.portronics.com](http://www.portronics.com)

Email: [help@portronics.com](mailto:help@portronics.com)

Contact No. : +91 9555245245 , 011-42413131

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



For E-waste & ROHS compliance refer to <http://www.portronics.com/ewaste.html>