 




Vayu Swift

Corded Tyre Inflator with LED Light

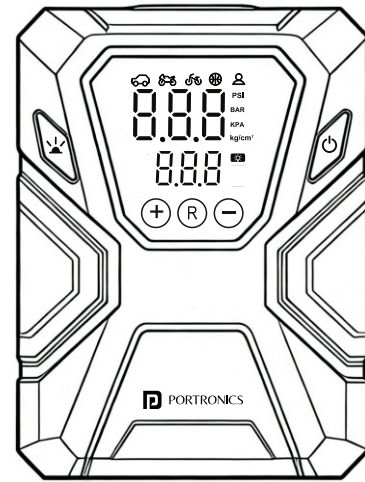

Thank you for choosing the Portronics Vayu Swift Portable Tire Inflator. Designed for quick and convenient inflation, Vayu Swift is ideal for cars, bikes, bicycles, sports balls, and other inflatables.

Please read this manual carefully before first use and keep it for future reference.

User Manual


Safety Instructions

Important Precautions


- Read all instructions carefully before use.
- Use the product only for its intended purpose.
- Keep the inflator away from children.
- Do not dismantle, repair, or modify the product yourself.
- Keep away from fire, flammable liquids, and excessive heat.
- Do not use the inflator in rain or wet conditions.
- Avoid overinflating tyres or inflatables.
- Ensure the preset pressure matches the recommended pressure of the tyre or inflatable item.
- Do not pull the cable or air hose forcefully.
- The metal parts of the hose may become hot during use. Avoid touching immediately after operation.
- Maximum continuous working time: 10 minutes.
- Allow the inflator to cool before reusing.
- Compatible with DC 12V car power supply only.

Product Overview

Main Controls

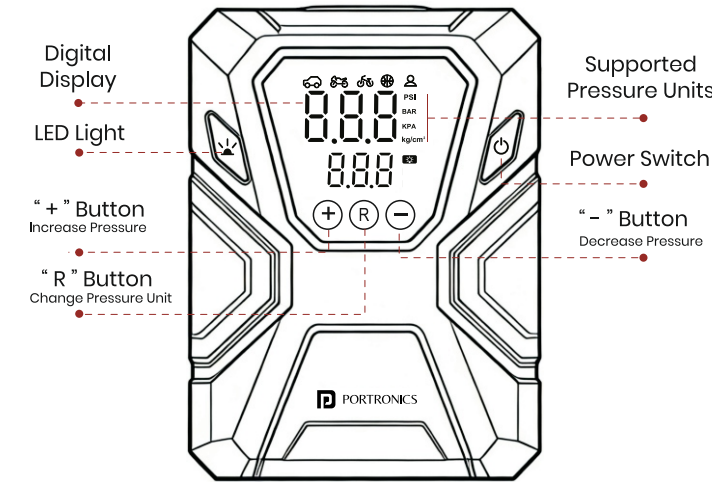

In the Box

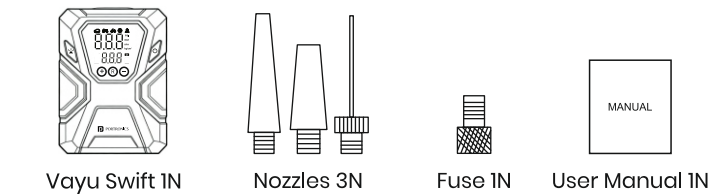


Specification Details

Operating Voltage	: DC 12V
Maximum Current	: 10A
Maximum Pressure	: 150 PSI
Pressure Accuracy	: ± 1 PSI
Pressure Units	: PSI, KPA, BAR, KG/CM ²
Continuous Working Time	: ≤ 10 Minutes
Material	: ABS + Metal

How to Use


Step 1: Start the Vehicle

 Start your car engine before connecting the inflator.

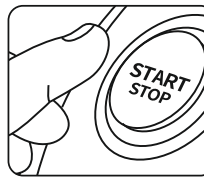


Step 2: Connect Power

Insert the power plug into the car's 12V cigarette lighter socket.

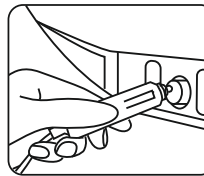


Step 3: Connect the Air Hose

- Remove the tyre valve cap. Attach the air hose securely to the tyre valve.
- Ensure the connection is tight to prevent air leakage.

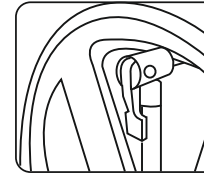


Step 4: Set Desired Pressure

- Press the "R" button to select the pressure unit.
- Use the "+" and "-" buttons to set the required pressure.
- Once the display flashes, the pressure is set.

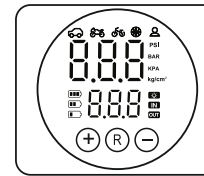

Step 5: Start Inflation

- Press the power button to begin inflation.
- The inflator will automatically stop once the preset pressure is reached.

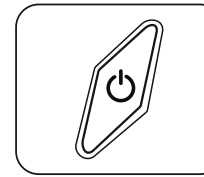


LED Light Function


Press the LED light button to use the built-in light during night-time or emergency situations.

Replacing the Fuse

If the inflator does not start:

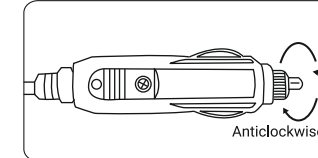

- Rotate the cigarette lighter tip anti-clockwise.
- Remove the fuse carefully.

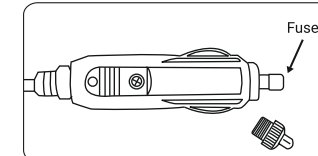

- Replace it with a compatible fuse.
- Reattach and tighten the cap securely.

Use only compatible replacement fuses.

Troubleshooting

Inflator does not work

- Check the power connection.
- Ensure the car engine is running.
- Verify the fuse condition.
- Check if the preset pressure is higher than the current tyre pressure.

Inflation is slow

- Ensure the hose connection is tight.
- Check for hose leakage.

Air leakage

- Ensure all nozzles and connectors are tightly secured.

Pressure display shows "0"

- Low-pressure inflatables may not display measurable pressure.
- If the tyre is completely flat, allow a few moments for pressure detection.



www.portronics.com

For Support

Visit : www.portronics.com

E-mail : help@portronics.com

Contact No.: +91 9555245245

(Working Hours: Monday - Saturday, 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste