PORTRONICS

Spark X

Bluetooth Speaker



USER MANUAL


PACKING LIST



1 User Manual

2 Speaker

3 Type-C cable




1 2 3 4

1 Play / Pause Button
- Press once to play or pause music.
- The Type-C charging cable works as an FM antenna
- In FM mode, press once to auto-scan FM channels.
- Press and hold to switch to TWS/Bluetooth mode.

2 Next Track / Volume Up
- Press once to play the next track or FM channel.
- Press and hold to increase the volume.

3 Previous Track / Volume Down
- Press once to play the previous track or FM channel.
- Press and hold to decrease the volume.

4 Mode / Power Button
- Press once to change the operating mode: Bluetooth, TF Card, or FM Mode.
- Press and hold to turn the device ON or OFF.

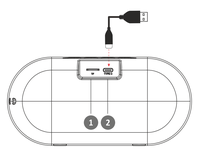

1 2

1 **microSD**

2 **Charging Type-C 5V**

TECHNICAL SPECIFICATION

Total output power	: 5W
Frequency Range	: 80Hz - 18 Khz
Bluetooth Version	: 5.3
Total Battery Voltage and Capacity	: 3.7V 1500mAh
Battery Type	: Li-Ion 18650
Charging	: 5V (Type C)
Full Charge	: Red Indicator Off
Charging	: Red Indicator Stable
Charging Time	: 2-3 Hours

PORTRONICS

www.portronics.com

For Support
Visit : www.portronics.com
Email : help@portronics.com
Contact No. : +91 9555245245
(**Working Hours :** Monday - Saturday, 10:00am - 6:00pm)

E- Waste Management
E: info@3mrecycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste