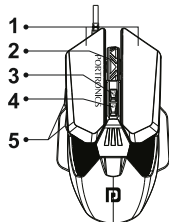**PORTRONICS**

VADER X
Wired Gaming Mouse

I. In the box

1 x Wired Mouse   1 x User Manual

II. Physical Specifications

1 = Left and Right Buttons
2 = Scroll Wheel
3 = DPI Adjust Button (+)
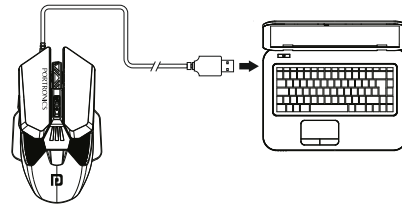4 = DPI Adjust Button (−)
5 = Forward & Backward Buttons

III. Change Optical Sensitivity (DPI)

- Plug the USB into the USB port of your laptop or desktop PC and your mouse is now ready for use.
- If required, the optical sensitivity can be adjusted by pressing the DPI button to toggle between 1200 DPI(Light turns yellow),1600 DPI(Light turns blue),2400 DPI (Light turns pink), 4800 DPI(Light turns green),7200 DPI (Light turns red) and 12800 DPI(Light turns light blue).
- Long press 5 seconds DPI Button to turn on/off the Lighting .

IV. Modes

You can start using the mouse by plugging its USB-A connector into the USB port of your computer.

V. Product Specifications

Type	Wired Mouse
Number of Buttons	7 Buttons (including Scroll Wheel)
Optical Resolution and Light Color	1200(yellow)-1600(blue)-2400(pink)- 4800(green)-7200(red)-12800(light blue)
Interface	USB
System Requirements	OS: Windows 11, macOS 12, iOS 12

VI. Performance Settings

- **Access these features by using Vader X Application**

- Adjust mouse sensitivity (1–11), scroll speed (1–11), double-click speed (50–300 ms), and polling rate (125–1000 Hz).
- DPI levels: 1200(yellow),1600(blue),2400(pink),4800(green), 7200(red),12800(light blue),toggled via DPI button

VII. Backlight Settings

- **Access these features by using Vader X Application**

- Choose from static, DPI breathing, color cycling, button reactive, or LED off modes.
- Adjust brightness with the slider.
- Hold the DPI button for 5 seconds to toggle the lighting
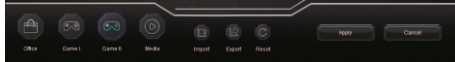- Hold the light button for 5 seconds to activate glowing mode.

VIII. Music Lighting

- **Access these features by using Vader X Application**

- Click the ♫ icon to enable music-reactive lighting.
- Modes: Wave, Flicker, Starlight.
- Live audio is shown via a soundwave bar.
- Toggle switch to turn ON/OFF.

IX. Profile Presets

- **Access these features by using Vader X Application**

- Switch between Office (default setup), Game I (fast DPI), and Game II (alternate gaming config).
- Use profile icons at bottom.
- Use Import / Export / Reset to manage profiles.

X. Macro Setup

- **Access these features by using Vader X Application**

Users can according to personal preferences and practical applications to edit MACRO, which is a combination of mouse functions. The setting steps are as follows:
① Please download the Vader X software.
② Under the macro list bar, right-click "New Macro Group" and enter the name of the macro group (eg Gragas E flash).
③ Right-click "New Macro". Right-click "Rename" to name the macro name.
④ Press "Record" button, record button will change to stop button automatically, and the software is ready for recording.
⑤ Press "E" and "D" on keyboard, key list will show the recorded button.
⑥ Click "Stop" button, and complete the recording.
⑦ Select the delay in key list which require to modify, click the mouse right button, then software will pop up a drop-down menu, pls choose item "modify delay" to modify the delay to a desired value. You can also insert "left button", "right button"," middle button" in the key list by selecting the item in the drop-down menu.

⑧ If you click the button "Run till Release" , and keep press your mouse button, the MACRO function can repeat cycling. If you click the button "Re-Times" ,and input the number in Re-time, it means that the MACRO function can repeat for the times you required.
⑨ Go back to the "BASIC SETUP", choose a desired mouse button to apply MACRO Setting from function list. The name you edited (e.g. Gragas E flash) will show in list. Select it and click "Apply" button, you can execute complex combinations with ease.

XII. How to Download Vader X Software

Visit the Portronics website and search for Vader X Mouse. Open the product page and scroll down to the "Software" section.

Click on the Download button — the software file will automatically start downloading to your device.

Warranty Note

Any damage caused by physical impact, water / liquid, fire, etc. caused by the customer or nature shall not be covered under warranty. Only product design, feature and functionality-related faults can be considered, During the warranty period, this product is only eligible for replacement and not eligible for repair, as per the brand's discretion.

XI. Care & Maintenance

1. Avoid exposing the mouse to excess moisture, extreme temperatures or dusty environments.
2. Use soft and damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing ammonia, alcohol or abrasives.
4. Do not allow any liquid to enter any of the openings.

PORTRONICS