

6cm


 PORTRONICS

MOBIKE III


BIKE PHONE MOUNT

How to assemble:

1. Unscrew the nut ② from the back of the bracket ①.




2. Install the mount ③ and nut ② onto the screw, and tighten the nut ②.

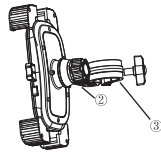


12cm

3. Put the anti-slip silicone pad ④ onto the mount.

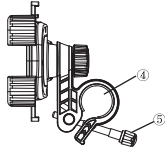

4. Clamp the mount with the anti-slip silicone pad on the bicycle handlebar and tighten the screw ⑤.

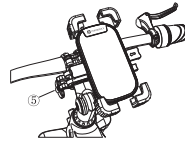

How to use:

Press the OPEN button ⑥ to open the four claws of the bracket and put your phone into the bracket; Press the CLOSE button ⑦ to lock the phone.

