



MAGMA

HUMIDIFIER WITH NIGHT LAMP



User Manual

Product Overview

We appreciate your trust in us. Magma is designed to elevate your space with soothing mist and mesmerizing light effects. Please read this manual carefully to ensure safe and optimal use.


Safety Measures

- Use clean, room temperature water only
- Do not overfill the tank
- Unplug before cleaning or refilling
- Place on a flat, stable surface
- Keep away from electronics and flammable items
- Do not operate without water
- Keep out of reach of children and pets
- Use the original charging cable supplied
- Do not block the mist outlet


What's in the Box

1. 1 N Humidifier Unit
2. 1 N Power Cable
3. 1 N User Manual

①



②



③



1. Control Button


Used to control mist and lighting modes

2. Type - C Port

For connecting the power cable

3. Twist to Open

Rotate the top lid counter-clockwise to open and fill water

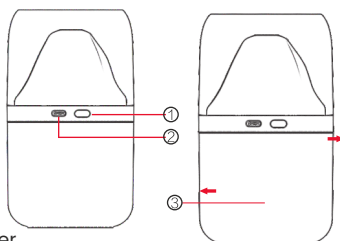

Product Specifications

Model Name : Magma	Water Capacity : 280ml
Model ID : POR-3104	Dimensions : 145.5×85×85mm
Power : 1.8W	Color : White
Input Voltage : DC 5V-1A	

How to Add Water

- Rotate the top cover counter-clockwise to open
- Fill the tank with clean tap water (do not exceed max fill line)
- Securely close the lid clockwise

How to Use

Mist Modes

Short Press (1st) : Continuous mist mode (auto shut-off after 4 hrs)

Short Press (2nd) : Intermittent mist (30 sec ON / 30 sec OFF, auto shut-off after 8 hrs)

Short Press (3rd) : Turns mist OFF

Lighting Modes

Long Press (1st) : Flame light mode

Long Press (2nd) : Colorful RGB light

Long Press (3rd) : Turns light OFF

Maintenance Tips

- Clean the water tank every few days to prevent odor or mold
- Use a soft cloth to wipe the exterior



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

Working Hrs. :

Monday - Saturday 10:00am - 6:00pm



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste